

## Equipment Controls

**Power Button**

Switches the power on/off for the currently selected device  
Switches STB to power on or standby mode

**TV Button**

Select to control TV (if programmed)

**Replay Button**

Goes back approx. 7 seconds

**Rewind Button**

Rewinds video

**Stop Button**

Stops playback of video

**Play Button**

Plays video or resumes a paused program

*Controls video program for  
LIVE TV / DVR / VOD*

**Menu Button**

Displays on-screen menu or home screen

**Options Button**

Provides additional options for certain on-screen menu or highlighted\*

**Back Button**

Goes back one level within menus\*

**Guide Button**

Press to cycle through the on-screen guide and favorites lists

**Volume +/-**

Increases or decreases volume of the currently selected device

**Mute Button**

Toggle audio on or off

**Number Keys**

Allows direct access to specific channels and menu items

**Input Button**

Changes the current A/V input of the selected device programmed (i.e. TV or AUX)  
May be used when entering a period in certain channels

Displays on-screen keyboard for certain applications

## Navigation Controls


**STB Button**

This button is pre-programmed to control the Entone device

**AUX Button**

Select to control another device (if programmed)

**Forward Button**

Fast forwards video

**Skip Button**

Advances ahead in 30 second increments

**Pause Button**

Pauses video

**Record Button**

Starts or stops recording a program

**Info Button**

Displays on-screen information about the current TV / VOD / DVR program

**Navigation Button**

**Arrow Keys:** Navigates up, down, left and right within the on-screen guide or menus  
**OK:** Executes the currently selected menu option

**Exit Button**

Exits the current menu item or back to LIVE TV

**Channel/Page Button**

Changes channel up/down or pages up/down within the on-screen program guide

**Last Button**

Press to change to previously tuned channel

**Closed Caption Button**

Press to enable/disable

### Turning Television ON/OFF

1. Press to set remote to control your television.
2. Press to turn ON/OFF your television.

### Changing Cable Channels

1. Press to set remote to change cable channels.

## PROGRAMMING YOUR REMOTE *Auto Search Procedure*

- Turn on your television.
- On the remote control, PRESS a device mode key (i.e., **TV**) and hold for 5s. The device mode key will light up.
  - a. **NOTE:** Use the **AUX** mode key to program control of VCR, DVD player, cable box, satellite set-top-box and audio device.
- PRESS the **POWER** key once.
- Aim the remote control at the TV. PRESS either the **CHANNEL UP** key or **CHANNEL DOWN** key to do device auto-scan:
  - a. PRESS the **CHANNEL UP** key to start searching upward at an approx. 5 seconds interval for each device code. The **TV/AUX** mode key will be on and blink every 5 seconds while in the device scan mode.
  - b. **NOTE:** In this search mode, the remote control will send IR codes from the library starting from the lowest code set number to the end of code set for that device; OR
  - c. PRESS the **CHANNEL DOWN** key to start searching downward at an approx. 5 seconds interval for each code set. The **TV** mode key will be on and blink every 5 seconds while in the device scan mode.
  - d. **NOTE:** In this search mode, the remote control will send IR codes from the highest code set number to the beginning of code set of that device.
- If the TV turns off, a working code has been found. PRESS **OK** once to lock in the code. The selected mode key will blink twice.
- If all code sets of that device is exhausted in the search and the **OK** is not pressed, the selected device key will fast blink 7 times and the search mode will be terminated.

**NOTE:** During the auto-scan, you can PRESS **UP** arrow or **DOWN** arrow to advance to the next device code immediately without waiting for 5 seconds. You can also use **UP** arrow or **DOWN** arrow to change the direction of the search.

**NOTE:** In the programming mode if no key is received within 30s, the device mode key backlight will blink rapidly for 7 times to indicate an error and then extinguish, and the programming mode will end.

---

## TROUBLESHOOTING

**MISSING CHANNELS:** PRESS Guide and check if display is set to “Subscribed” or “Favorites” list. To display “All” or “Subscribed” channels, PRESS Guide button repeatedly until the tab at the top of the Guide displays “All” or “Subscribed”.

**Channel Blocking** will not display channels in the Guide. To edit your Channel Blocking settings, see Channel Blocking in your PSCtv User Guide.

**Parental Controls** can also prevent channels from being displayed. To edit your Parental Control settings, see Parental Controls in your PSCtv User Guide.

---

In order to make any system changes or purchase from Pay-Per-View/Video-on-Demand services, a password or PIN is required. **The default password and PIN is set to 0 (zero).**

To change your password and/or PIN, please reference the Settings, Editing a User Account section of the new PSCtv User Guide.