

NOVA

Remote Control Guide (EMEA)



COPYRIGHT

©2014 Entone, Inc. All rights reserved. This document contains proprietary information protected by copyright. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written consent of Entone, Inc., 20863 Stevens Creek Blvd, Suite 300, Cupertino, CA 95014, U.S.A.

DISCLAIMER

IF THIS PRODUCT DIRECTS YOU TO COPY MATERIALS, YOU MUST HAVE PERMISSION FROM THE COPYRIGHT OWNER OF THE MATERIALS TO AVOID VIOLATING THE LAW WHICH COULD RESULT IN DAMAGES OR OTHER REMEDIES.

TRADEMARKS

Entone and the tagline "Connecting the Home" are trademarks of Entone, Inc. All other trademarks or registered trademarks belong to their respective owners.

CHANGES

The material in this document is for information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, Entone, Inc. assumes no liability resulting from the use of the information contained herein. Entone, Inc. reserves the right to make changes in the product design without reservation and without notification to its users.

Table of Contents

OVERVIEW

- 2 Remote Control
- 5 Controlling Your Devices
- 6 Program Remote to Control Your Devices
- 7 Auto Search Procedures
- 8 Setup Keys Punch Through Procedures
- 8 Reset Punch Through Procedures
- 8 Reset Procedures

POWERING UP


- 9 Setting up Remote Control

APPENDIX

- 10 Troubleshooting
- 11 Device Codes: Audio-Amplifier
- 11 Device Codes: Audio-Accessory
- 12 Device Codes: Audio-Receiver
- 15 Device Codes: Television
- 31 Device Codes: Video-DVD

- 40 Declaration of Conformity

OVERVIEW REMOTE CONTROL

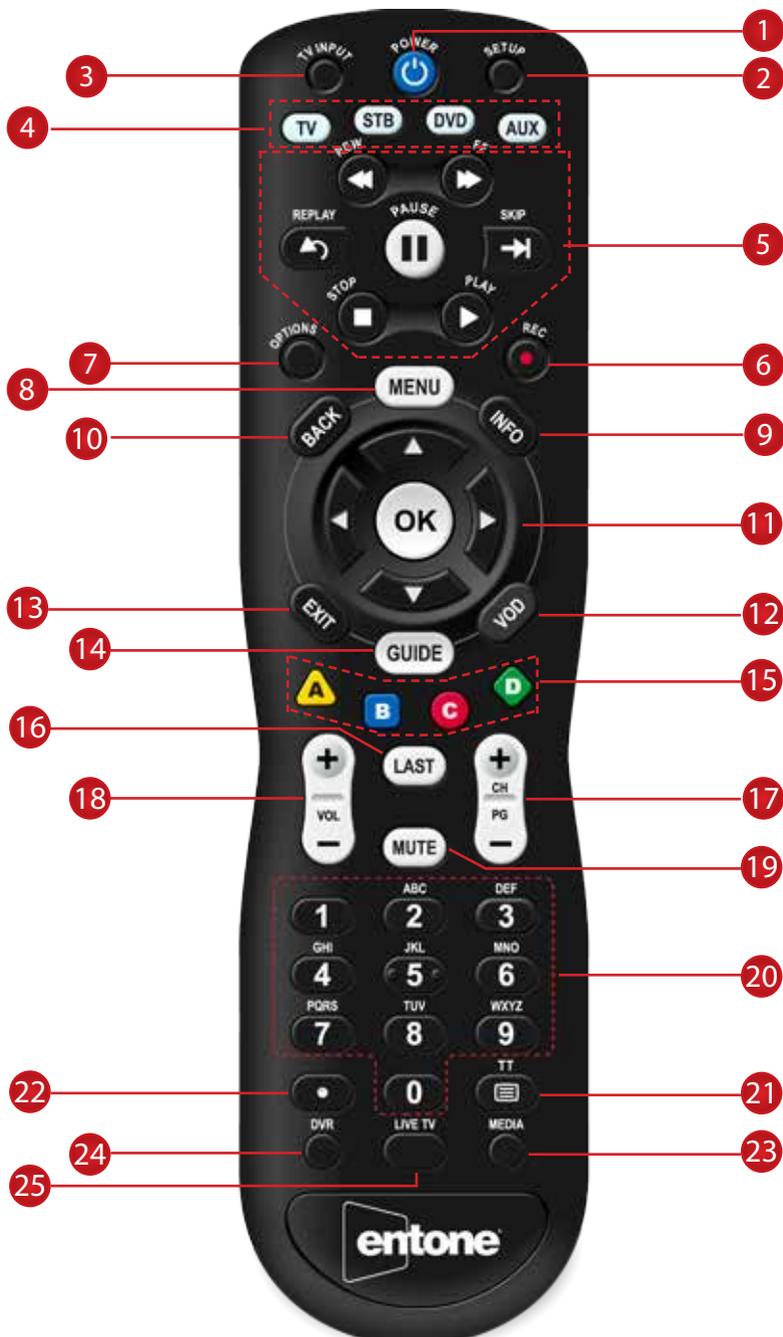

Button(s)	Description
1 POWER	Switches the power on/o for the currently selected device Switches STB to power on or standby mode
2 SET UP	Set up remote for TV
3 TV/ INPUT	Changes the current A/V input of the selected device programmed (i.e. TV or AUX)
4 DEVICE CONTROL	TV: Select to control TV (if programmed) STB: This button is pre-programmed to control the Entone device DVD: Select to control DVD (if programmed) AUX: Select to control another device (if programmed)
5 TRANSPORT KEYS	Controls video program for LIVE TV / DVR / VOD REPLAY: Goes back approx. 30 seconds REW: Rewinds video FF: Fast forwards video SKIP: Advances ahead in 30 second increments PAUSE: Pauses video PLAY: Plays video or resumes a paused program STOP: Stops playback of video
6 REC	Starts or stops recording a program
7 OPTIONS	Provides additional options for certain on-screen menu or highlighted item*
8 MENU	Displays on-screen menu or home screen
9 INFO	Displays on-screen information about the current TV / VOD / DVR program
10 BACK	Goes back one level within menus *
11 NAVIGATION	ARROW KEYS: Navigates within the on-screen guide/menus OK: Executes the currently selected menu option LEFT/RIGHT: Rewinds/Fast forwards video
12 VOD	Feature enabled by your service provider (contact service provider for details)
13 EXIT	Exits the current menu item or back to LIVE TV
14 GUIDE	Displays the on-screen program guide

Availability of certain features is dependent on your service provider

Button(s)	Description
15 SHORTCUT	Color-code buttons correspond to features that are enabled by your service provider (contact service provider for details)
16 LAST	Changes channel to the previously viewed channel
17 CH/PG	Changes channel up/down or pages up/down within the on-screen program guide
18 VOL + /-	Increases or decreases TV volume
19 MUTE	Turns TV volume on/off
20 NUMBER KEYS	Allows direct access to specific channels and menu items
21 TT	Toggles Teletext on/off
22 DOT	Used when entering a period in certain channels Displays on-screen keyboard for certain applications
23 MEDIA	Feature enabled by your service provider (contact service provider for details)
24 LIVE TV	Feature enabled by your service provider (contact service provider for details)
25 DVR	Feature enabled by your service provider (contact service provider for details)

CONTROLLING YOUR DEVICES

The Nova remote control can be used to control other devices (e.g. TV) as well. It uses InfraRed (IR) light signals to control other devices. IR signals travel only short distances (10 meters or less), and cannot go through walls or other solid objects. You must point the remote directly at these devices, with no objects blocking the line of sight.



PROGRAM REMOTE TO CONTROL YOUR DEVICES

You can program the Nova to control other devices by

1. Locate the device code for your device in the Device Codes table provided in the Appendix starting on page 11. If you cannot find the device code for your device or it does not work after trying the listed device codes for your device brand, then you can try the auto search on page 7.
2. Turn on your device.
3. On the remote control, press the Device Control key (TV / STB / DVD / AUX) to choose the device mode.
4. Press and hold the "SETUP" key until the LED light blinks twice.
5. Enter the five-digit device code for your device. If you perform this procedure correctly, the LED will blink twice. Otherwise, it has a long blink.
6. Press "Power" key. If your device turns off, setup is complete.
7. If your device does not turn off, repeat this procedure using the next code for your device brand.

Record working codes here

TV code	<input type="text"/>				
DVD code	<input type="text"/>				
AUX code	<input type="text"/>				

AUTO SEARCH PROCEDURES

If your device does not respond to the remote control after trying all device codes listed for your brand, or if your brand is not listed, try searching for your device code as follows:

1. Turn on your device.
2. On the remote control, press the corresponding Device Control key (TV / DVD / AUX) to choose the device mode.
3. Press and hold the "SETUP" key until the LED light blinks twice.
4. Press number keys "9" - "9" - "1".
5. Press "Power" key.
6. Press "CH +" key repeatedly until your device turns off.
7. Press and hold "SETUP" key until LED blinks twice to save the working code.

KEYS PUNCH THROUGH SETUP PROCEDURES

By default, a key pressed on the remote control is sent to the selected device mode only. The punch through function allows specific keys to be sent to a particular device. (For example, the volume +/- key may need to be sent to the AUX device instead of the TV).

1. On the remote control, press and hold the "SETUP" key until the LED blinks twice.
2. Press number keys "9" - "7" - "8".
3. Press source device mode, e.g. TV.
4. Press keys to punch through, e.g. VOL + / -, MUTE.
5. Press target device modes, e.g. STB, DVD.
6. Press and hold the "SETUP" key until the LED blinks twice.
7. LED has a long blink in case of error.

RESET PUNCH THROUGH PROCEDURES

1. Press and hold the "SETUP" key until the LED blinks twice
2. Press keys "9" - "7" - "8"
3. Press and hold the "SETUP" key until the LED blinks twice.
4. LED has a long blink in case of error.

RESET PROCEDURES

1. Press and hold the "SETUP" key until the LED blinks twice
2. Press keys "9" - "7" - "7"
3. Press and hold the "SETUP" key until the LED blinks twice.
4. LED has a long blink in case of error.

POWERING UP **SETTING UP REMOTE CONTROL**

1. Locate the two AA batteries and remote control in the accessory box
2. To open the battery cover, press down on the battery cover latch and slide it off
3. Insert the AA batteries, matching the "+" and "-" marks on the batteries to the "+" and "-" marks on the interior of the remote control
4. Snap the battery cover back onto the remote control



APPENDIX TROUBLESHOOTING

Problem	Solution
The LED does not blink when a key is pressed	Replace the batteries with two (2) new AA batteries
LED blinks when key is pressed but TV or STB does not respond	Make sure you are aiming the remote control at your device and that you are within 25 feet of the device you are trying to control
The remote control does not control TV functions	Follow "Controlling your tv" on page 5 to program the remote to control your TV
The LED blinks 5 times with each key press	The batteries need replacement. Replace the batteries

DEVICE CODES

Your Nova Remote Control can control many brands and models of devices. The following pages list device codes for many brands of devices. Many brands list more than one code, and you may need to test several codes to find the best match for your devices. Your devices may be supported even if your brand is not shown in the list below. If you cannot locate your brand, or none of the listed device codes works, then you may still use the “Auto Search Procedures” on page 7 to try to locate a suitable device code.

AUDIO – AMPLIFIER

Acoustic Energy 31438
 Acoustic Solutions 31470, 31708
 AS 31470, 31708
 Cambridge Audio 31730, 31982
 Cambridge Soundworks 31471
 Creative DK Digital 31471, 31715, 31883
 Eltax Linn 31708, 30829
 Meridian Naim 30829, 31895
 Philips Red Star 30641, 31381
 Reoc Tangent Teufel 31381, 31708, 33306, 32100
 Tevion 31601

Audio Amplifier

Acoustic Energy 31438
 Acoustic Solutions 31501, 31446, 31466, 31470, 31601
 Arcam AS 30641, 31501, 31446, 31466, 31470, 31601
 Basic Line Belson 31381
 Cambridge Audio 31730, 31982
 Cambridge Soundworks 31471
 Creative 31471, 31715

Cyrus Denon DK Digital Durabrand eBench Firstline Hitachi JBL Klegg Limit Linn Magnat Magnum Marantz Naim Onkyo Pacific Philips Pioneer Red Star Reoc Sven Synn Tangent Teufel Tevion Trice upXus Vieta Yamaha 31012, 30272, 32706, 31883, 31568, 31648, 31466, 33050, 31177, 31438, 31381, 30829, 31177, 31601, 32138, 30641, 30829, 31895, 33050, 32878, 31601, 30641, 30300, 30823, 31381, 31381, 31568, 31381, 31708, 33306, 33574, 31601, 31568, 31446, 31177, 30848, 32592, 30354

Audio Receiver

Cyrus Onkyo Pioneer 31012, 33050, 30823

Audio Tuner

Tangent 33306

CD

Tangent 33306

Speaker System

Creative Denver DK Digital Durabrand Logitech Onkyo Teufel 31715, 31568, 31883, 31568, 31408, 32878, 32100, 32322

Speaker System / Amplifier

Onkyo Teufel 32878, 32100, 32322

AUDIO - ACCESSORY

Audio Amplifier

Denon Sony 32815, 30159

Audio Receiver

Denon Philips 32815, 32881

Digital Media Receiver

Philips 32881

Digital Media Receiver - Audio

Philips 32881

Docking System

Apple Bose 31115, 33079

Denon 32815
 Samsung 32609

DVD Home Cinema

Denon 32502

Hi-Fi System

Sony 30159

Miscellaneous Audio

Apple 31115

Sony 30159

Music Player

Apple 31115

Sound Bar

Bose 33708

Bush 33802

Denon 32502

Harman/Kardon 33756

JBL 33756

LG 33217

Panasonic 33323

Philips 33776, 33282,

32675

Samsung 32660, 32609

Yamada 33283

Yamaha 33283, 32116,

32021, 33325,

32458

Speaker System

Blaupunkt 33657

Bose 33708

Denon 32502

Logitech 33561

Panasonic 33323

Philips 32675

Q Acoustics 32682

Samsung 32609, 32660

Teufel 33650

Yamaha 32116, 32021,

32458

AUDIO - RECEIVER

Arcam 31212, 31216,

31984

Audiolab 31189

Audiotronic 31189

AVM 30698

B & O 30799

Bang & Olufsen 30799

Cambridge 31647

Audio

Denon 32820, 32857

Eltax 30487

Fine Arts 31189

Grundig 30792, 31189

Harman/Kardon 30110

JVC 30074

Kenwood 31313, 31570

Marantz 31089, 31189

Micromega 31189

Musicmagic 31089

Myryad 31189

NAD 30320, 31989

New Acoustic 30320, 31989

Dimension

Onkyo 31320, 31805

Panasonic 33520

Philips 31089, 31266,

31289

Pioneer 31023, 31184,

31935

Quad 31929

Revox 31089

Rotel 30793

Sharp 30186

Sherwood 31567

Sony 31441, 31058

Soundwave 30609

Stereophonics 31023

Technics 31308, 31309,

31518

Yamaha 30186, 31176

3D Connected Blu-ray DVD player

Harman/Kardon 33779

Pioneer 33742

3D Connected Blu-ray Home Cinema

Harman/Kardon 33779, 33391

LG 32676, 33995

Panasonic 33520, 33425

Philips 33289, 33783,

33005, 32986

Pioneer 33742, 33601

Samsung 32809

Sony 32522, 32578

Yamaha 33534

A/V Conferencing

Pioneer 33057

Audio Amplifier

Arcam 31212

Denon 30004, 32857,

31360

Harman/Kardon 32670, 31310

Kenwood 31027

Marantz 31189, 31289

McIntosh 31289

Myryad 31189

NAD 30320, 31989

New Acoustic 30320, 31989

Dimension

Onkyo 30135

Pioneer 31935

Quad 31929

Rotel 30793

Sherwood 30653, 31077

Sherwood 30653

Newcastle

Sony 31441, 31058,

31758

Yamaha 30176, 31276,

33267

Audio Receiver

Aiwa 30121, 31405,

31827

Akai 30609, 31390

Andersson 30493

Arcam 31212, 31216,

31214, 32256,

31984, 31120

Audiolab

31189

AVM 30698

B & O 30799

Bang & Olufsen 30799

Cambridge

31647

Audio

Cat

31248

Centrum 31681

Dantax 30463

Denon 31360, 32857,

30004, 32516,

30771, 32820,

33347, 32987,

33642, 32681,

33380, 33643,

31434, 33716,

31460, 33245

DK Digital 30487

Eltax 30487, 31248,

31681

Epworth 30121, 31405,

31827

Fine Arts 31189

Goodmans 30609

Grundig 30792, 31189

Harman/Kardon 31304, 32443,

30110, 32974,

32670, 31189,

31306, 31310

Integra 33860, 32730,

31805

JVC 30074, 31676,

Kenwood	31374, 32239 31570, 32972, 31027, 31313, 31569, 30262, 30186	Soundwave	31558, 31658 30609	Boombox	
Marantz	31289, 32114, 31189, 31089, 31269	Sungoo	31313	Panasonic	30367
Micromega	31189	TAG McLaren	31189	CD	
Myryad	31189	TAG McLaren	31189	Aiwa	30121
NAD	31989, 30320, 30609	Audio		Denon	30004, 32987
Nakamichi	30876	Teac	30609, 30463, 31567	Epworth	30121
New Acoustic	31989, 30320, 30609	Technics	31518, 31308, 30208, 30039, 31763, 31309, 32605, 31765	Philips	31189
Dimension	30609			CD Changer	
Onkyo	31805, 30135, 31320, 32730, 33860, 32989, 33259, 31575, 33188, 33682, 30463	TechniSat	30039	Pioneer	31123
Orion	31275, 30367, 31763, 32605, 31518, 31316, 31533, 31766, 30039	Thomson	31194, 31354	Yamaha	30712
Panasonic	31269, 31120, 31189, 33005, 31089	Thorens	31189	CD-R	
Philips	31269, 31120, 31189, 33005, 31089	Universum	30609	Denon	30771
Pioneer	31935, 31123, 33057, 32104, 30289, 32941, 32743, 31143, 33597, 33628, 31023, 31623, 33618, 31823, 32286, 31284, 31184, 31459	Yamaha	33580, 30176, 32061, 31276, 32467, 33030, 33433, 30376, 30712, 31815, 33266, 31376, 33407, 33319, 31949, 33258, 31776, 32469, 33371, 32337, 32342, 33130, 31476, 33392, 30186, 31176, 32950, 33267, 31331, 32406, 33504	Clock-Radio	
Proficient	30609			Panasonic	30367
Proson	30609	Audio Tuner		Digital Media Receiver - Audio	
Quad	31929	NAD	30320	Arcam	31984, 32256
Revox	30140, 31089	New Acoustic	30320	Docking System	
Rotel	30793	Dimension		Onkyo	31805
Samsung	32137	Quad	31929	Pioneer	33422
Sansui	30609	Blu-ray		Yamaha	32455
Sharp	30262, 30186	Sony	32522	DVD	
Sherwood	30491, 30653, 31077, 31567	Blu-ray Home Cinema		Denon	31460, 31434
Sherwood	30653, 31567	Harman/Kardon	33391, 33779	Kenwood	31313
Newcastle		LG	32676, 33995	Panasonic	31765
Siemens	30609	Onkyo	31805	DVD Home Cinema	
Sony	32475, 32172, 31759, 31758, 31058, 31258, 31441, 31158, 31112, 31454, 33158, 33484,	Panasonic	33520, 33055, 33425, 32745, 33309	AEG	31389, 31390
				AFK	31389
		Samsung	32809, 32948, 32713, 33427	Airis	32028
		Sony	32522, 32578, 31622, 32852, 33158, 32172	Aiwa	31622
		Teufel	33296	Akai	31390
		Yamaha	33534	All Tel	31390
				Amstrad	31390
				Andersson	30493
				Arcam	31984
				ASCOMTEC	31389
				Audiosonic	31389
				Belson	31389
				Binatone	31389
				Blue Sky	31390
				BlueTinum	32028
				Bose	31933, 31629, 31229
				Cat	31389
				Clatronic	31389
				Curtis	31389
				Daewoo	31436
				Dantax	31390
				Daytek	32028
				Denon	31460, 30004,

	32857		32986, 33783	DVD/PVR Home Cinema	
Denver	31389	Pioneer	31459, 33601,	LG	32932
Dual	31390		31284, 31023,		
Elta	31390		31123, 31184,	DVD-R Home Cinema	
Eltax	32028		32286	JVC	32030
Epworth	31622	PJ	31389	Samsung	33051
Gateway	31567	Pro Vision	31389		
Goodmans	31611, 31390,	ProLine	31390	DVD-R/Digital Terrestrial/PVR	
	31389	QONIX	31390	Combination	
Grunkel	31390	Quadro	31389	Samsung	32714
Hanseatic	31390	Red Star	31389		
Harman/Kardon	33391, 31306	Rotel	30793	DVD-R/Digital Terrestrial/PVR	
HCM	31390	Samsung	32809, 31868,	Home Cinema	
HE	31389		32714, 32953,	Pioneer	31459, 32286
Hiteker	31389		33382, 31295,		
Home Tech	31389		32948, 32713,	DVD-R/PVR Combination	
Industries			33077, 33193,	Philips	32341
Jamo	32160		33427, 33051,	Sony	32172
JBL	31306		32137		
JVC	31374, 32239,	Schneider	31390	Hi-Fi System	
	31676, 30074,	Scott	31389	Aiwa	30121, 31405,
	32030	Sharp	33096		31827, 32309
Kenwood	31313, 31570,	Shenzhen KXD	31389	Arcam	31984
	31293	Multi-Media		B & O	30799
KXD	31389	Silva Schneider	31390	Bang & Olufsen	30799
Lenoxx	31611	Sony	31822, 31622,	Bose	31841
LG	32197, 31293,		32172, 31827,	Denon	32987, 31434,
	32676, 32932,		33257, 31858,		30004, 30771,
	32284, 33285,		32578, 31658,		33530
	33995		31882, 31759,	Epworth	30121, 31405,
Magnat	31389		31958, 32522,		31827, 32309
Medion	32197		33158, 31454,	Grundig	31189
MEI	31390		31758, 32852,	JVC	30074, 31374
NAD	32457, 30609		31558, 32486,	Kenwood	30262, 31313,
New Acoustic	32457, 30609		32475		31569
Dimension		Targa	31293	LG	32284, 31293,
Nexius	31390	Technics	31765, 31763		32197
Nikkai	31389	Teufel	33296	Onkyo	32451, 33188,
Onkyo	30135, 31320,	Tevion	31611, 31389		31805, 33737,
	31805	Thomson	31194		30135
Orava	31389	Tokai	31390	Panasonic	33712, 31765,
Palladium	31293, 31390	United	31390		30367, 31288,
Panasonic	31779, 33520,	Universum	31436, 32160,		31308, 31533,
	33425, 32745,		31390		31763, 31766
	32884, 33055,	Venturer	31390	Philips	31269, 31189
	33536, 31763,	Vieta	31611	Pioneer	33422, 31184,
	32967, 31766,	Xenius	31390		31143
	33235, 31316,	Xoro	32028	Samsung	32713
	33062, 31288,	Yamaha	31331, 33504,	Sharp	30262
	31533, 33309,		30712, 32950,	Sony	31827, 32486,
	31765, 31275		33534, 32406,		31258, 33124,
Philips	32459, 33127,		33328, 33433		31058, 31441
	31831, 31673,	Zenith	31293	Technics	31308, 31765
	33289, 32341,			Thomson	31354
	32289, 33005,	DVD/PVR Combination		Yamaha	32455, 32406,
	32311, 31266,	Pioneer	31459		30712, 30176,
	31269, 33008,				33602

Internet Radio

Denon	33642
Integra	33860
Onkyo	33860, 33682
Yamaha	33580

LCD TV

Samsung	31295, 32714, 32809
---------	------------------------

MD

Aiwa	30121
Epworth	30121

Mobile Audio

Panasonic	33685
-----------	-------

Portable CD

Panasonic	31779
-----------	-------

Satellite

B & O	30799
Bang & Olufsen	30799

Satellite Radio

Arcam	31214
-------	-------

Sound Bar

Yamaha	33328, 32950
--------	--------------

Sound Bar DVD Home Cinema

Philips	32311
---------	-------

Speaker System

Bose	31933, 31229
Philips	32459
Pioneer	31459, 33601
Sony	33158, 31933

Television

B & O	30799
Bang & Olufsen	30799

TV/PVR Combination

Samsung	31295, 32714
---------	--------------

TV/VCR Combination

B & O	30799
Bang & Olufsen	30799

VCR

B & O	30799
Bang & Olufsen	30799

TELEVISION

Akura	00009, 01687
Alba	00009, 00037
Amstrad	00009
Anitech	00009
B & O	00565, 00620
Bang & Olufsen	00565, 00620
Beaumark	00178
Beko	00714, 00715
Beon	00037
Brionvega	01608
Bush	01556, 00009, 00037, 00374, 00698
Cascade	00009
Centrex	00826
Conia	01687
Contec	00009
Crown	00009, 00037
Daewoo	00009, 00037, 00374, 00499
Dayton Audio	00009
Denver	00587
Dixi	00009
Elfunk	01208
Elta	00009
Emerson	00361
Erisson	01682
Ferguson	00335
Fidelity	00361
Finlandia	00208
Fisher	00208
GoldStar	00178
Goodmans	00037, 00499
Graetz	00714
Grundig	00191, 00195, 00580, 00587, 00706, 02125
Havermy	00093
Hinari	00009, 00037
Hisense	01363
Huanyu	00374
Indiana	00037
ITT	00361
JVC	00606, 00653
König	00037
LG	01840, 01423, 00714
Loewe	00512
MAG	01687
Marantz	00556
Matsui	00208
Medion	01248
Memorex	01037
Metronic	00625
Mitsubishi	00108, 00512
Electric	

Mx Onda	01687
Myryad	00556
Mystery	03047
NAD	00037
NEC	00170
Neon	02673
New Acoustic	00037
Dimension	
Nordmende	00560
Otic	01687
Panasonic	03825, 00226, 00650
Philips	03678, 03614, 02485, 00037, 00556, 00639, 01798
Phocus	01652
Pilot	00706
Pioneer	00679
Polaroid	01687
Pro Vision	01324
Quelle	00037, 00512
Radiola	00037
Relisys	00865
Reoc	00714
Revox	00037
Salora	00361
Samsung	02051
Sanyo	01208, 00208
Schneider	01137
SEG	01037
Sharp	00093, 01393
Siemens	00191
Sliding	00865
Sony	00651, 01505
Soundwave	00037
Sunkai	00865
Sysline	00037
Tatung	01556
TCC	00826
TCL	03047, 00706
Teac	00037, 00698
Technics	00650
Technisnon	00714
Technosonic	01326
Tevion	01687
Thomson	03047, 00560, 00625, 01882
Thorn	00499
Toshiba	01508, 00035, 00650, 01356
Trio	01687
TVTEXT 95	00556
Universum	01037
Videocon	00508
Vivax	01308, 01326
Wharfedale	01556

Yoko 00037
YU-MA-TU 00037

3D Connected LCD/Digital Terrestrial/Cable Combination

Arçelik 03433
Grundig 03433, 02890
Loewe 01884
Panasonic 03825, 01636
Sharp 02951, 01659

3D Connected LED/Digital Terrestrial/Cable Combination

Panasonic 01636, 03825
Philips 02800, 03614, 03678, 02768, 01887
Toshiba 03323, 01508, 02676

3D Connected LED/Digital Terrestrial/Cable/PVR Combination

Panasonic 01636, 03825
Philips 03678, 02800, 03614

3D Connected LED/Digital Terrestrial/PVR Combination

LG 01840
Sharp 02951, 01659, 02676, 03287
Sony 02778

3D Connected LED/SAT/Digital Terrestrial/Cable Combination

Sharp 01659, 02951

3D Connected LED/SAT/Digital Terrestrial/Cable/PVR Combination

Arçelik 03433
Grundig 03433
Panasonic 01636, 03825
PEAQ 03649
Philips 03678, 02800, 03614
Sharp 02951, 01659
Sony 02778
Thomson 03649, 03047

3D Connected Plasma/Digital Terrestrial/Cable/PVR Combination

Panasonic 01636, 03825

3D Connected Plasma/SAT/Digital Terrestrial/Cable/PVR Combination

Panasonic 01636, 03825
Samsung 02051

3D Connected Plasma/SAT/Digital Terrestrial/PVR Combination

Panasonic 01636, 03825

3D LCD

Philips 03678
Sony 02778

3D LCD/Digital Terrestrial Combination

Bush 02673, 02676
Celcus 02676
Technika 02676

3D LCD/Digital Terrestrial/Cable Combination

LG 01840
Samsung 02051

3D LCD/Digital Terrestrial/Cable/PVR Combination

Grundig 03433, 02890, 02663, 02053

3D LCD/Digital Terrestrial/PVR Combination

cello 02673
Finlux 02676

3D LED/Digital Terrestrial Combination

Bush 03589
Grundig 03433
Hitachi 02676
Isis 02676
Samsung 02051, 03975
Sandström 03047

3D LED/Digital Terrestrial/Cable Combination

Medion 02676

3D LED/Digital Terrestrial/Cable/PVR Combination

Andersson 02676
cello 02673
PEAQ 03649
Samsung 02051, 03975
Thomson 03047, 03649, 03971, 02675

3D LED/Digital Terrestrial/PVR Combination

Finlux 02676
Orion 02676, 02005

3D LED/SAT/Digital Terrestrial/Cable Combination

LG 01840
Samsung 02051, 03975
Sony 02778

3D LED/SAT/Digital Terrestrial/PVR Combination

Panasonic 01636, 03825

3D Plasma

LG 01840

3D Plasma/Digital Terrestrial Combination

LG 01840, 02182

3D Plasma/Digital Terrestrial/Cable Combination

Samsung 02051, 03975, 00812, 01619, 02953

3D Plasma/Digital Terrestrial/Cable/PVR Combination

Samsung 02051

3D Plasma/PVR Combination

Panasonic 01636, 03825

3D Plasma/SAT/Digital Terrestrial/Cable Combination

LG 01840

3D TV

Andersson 02676
Arçelik 03433
Bush 03589
cello 02673
Daewoo 00661
Grundig 03433
Hitachi 02676
Isis 02676
LG 01840, 01423
Medion 02676
Panasonic 01636, 03825
PEAQ 03649
Philips 02800, 03614
Samsung 02051, 03975
Sharp 02951, 01659
Sony 02778
TCL 03649

Clatronic	01163		01149, 01308,		01305, 02741,
CMX	02868, 02832,		02426		00178, 02065,
	02799, 03067	Gorenje	02876, 01585		02358, 00037,
Conia	02032, 02410	Graetz	00714, 01163	Lifetec	02001
CPTEC	00625, 01363	Gran Prix	02333	Linsar	02676
Daewoo	00661, 01376,	Grandin	00865, 01298	Lodos	01149
	01661, 02246	Grundig	02890, 01223,	Loewe	01884
Daytek	01376		03433, 02663,	Logic	01585
Denver	01770, 02197,		03262, 01308,	Logik	02486, 03005,
	03067		02125, 01523,		03428, 01037,
DGM	02718, 02239,		01645, 02200,		02530, 03505
	02059, 02284		02239, 02127,	Logix	03465
Digatron	00037, 02890		01376	Lumatron	02023
Digihome	01149	Haier	02214, 03790	Luxor	01163, 02676
Digitek	01709	Hannsprece	02786, 03430,	Maqma	01709
Digitrex	03067, 03194		02818, 01776	Marks &	02246, 01770
DL	01326	Hanseatic	00808	Spencer	
DMTech	02001, 03480	Hantarex	02197	Mascom	01556
Donghai	02832	Harwa	01196	Matsui	02486, 01666,
Dual	01149, 01163,	HCM	01196		02279, 01667,
	02241, 02032,	Hisense	02037, 01363		02637, 02676,
	01037, 01585	Hitachi	02676, 01585,		02165
Dyon	02457		02207, 01576,	Medion	02676, 01248,
Easy Living	01666, 01709,		01667, 02214,		00808, 01585,
	01308, 02005		01149, 01163,		01149, 01741,
Electrolux	01585		02005, 02127,		02719, 01667,
Elonex	01776		02000, 02279		02001, 01376,
Emerson	01394	Höher	00865		01163, 01308,
e-motion	03465, 01645,	Hugoson	01666	Memorex	01556, 02279
	01709, 00865	Humax	01295	Metz	01687
Essentials	02486	HYD	01376	Micromaxx	01533
Eurovision	01163, 01149	Hyundai	00865, 01376	Mikomi	02001
Evesham	01248	IIsonic	01376		01149, 01585,
Technology		i-Joy	02713		00744, 01308
Evotel	02561, 02559,	Imperial	02339	Minerva	01248
	03589	Inno Hit	01667, 01163,	Mirai	01666, 01852
Fenner	01667		01585, 01149	Mivar	00609
Ferguson	02339, 02637,	iPure	01376	MyCom	01376
	03455	ITT	02675, 02125,	Myrica	01666, 01298
Finlux	01667, 02676,		02676, 01523	NAD	00865
	01248	ITV	01798	NEC	01585
Firstline	01363	JGC	01709	Neon	02673, 01709
Fisher	01585	JMB	02676, 02426	Neovia	00865, 01376
Foehn & Hirsch	02391	JVC	02118, 01818,	New Acoustic	00865
Fujitsu Siemens	01666, 01298,		00653, 02943,	Dimension	
	00808, 01248		01601, 01774,	Nikkei	02197
Funai	01817, 01595,		02714, 03874	Nordmende	02548, 02331,
	01394, 01666	Karcher	02125		01413, 02332
Gericom	00865, 01298	Kendo	01585, 02676,	Novex	01523
Gold	02023, 01770		01149	Odys	02799, 02719,
Goodmans	01523, 01687,	Kenmark	02637		02165
	01727, 02165,	Kenstar	02548	OK.	02676, 03434
	01163, 01376,	Keymat	01326	OKI	02676, 01308,
	02223, 01645,	Level	02023		01667
	01667, 01682,	Lexsor	01196	Olidata	01376
	01720, 02053,	LG	01840, 02182,	Onn	01709, 02125,
	02393, 02676,		01423, 01842,		01667, 02279

Onyx	01709		02474		01298, 02032
Orion	02005, 02000,	Sens	01865	Thes	02947
	02108, 02007,	Sharp	01659, 02951,	Thomson	00625, 02675,
	01196, 00443,		01393, 03287,		01882, 03047
	02001, 01667		01586, 01587,	Tokai	03480
Palsonic	03480		02676, 02214,	Toshiba	01508, 02775,
Panasonic	01636, 00650,		00093, 03119,		02676, 02598,
	01650, 03825	Silva Schneider	02333		02732, 03323,
Philips	02800, 01887,	Sinudyne	01667		00508, 01652,
	01506, 01798,	Sky Media	01376		02108, 01737,
	00639, 02813,	Sliding	00865	Tosonic	01508
	01744, 03614,	Sogo	01376	TRANS-	00865, 02023
	02680, 01867,	Sonix	01376	continents	
	02768, 00556,	Sony	01825, 02778,	UMC	02426, 02168,
	02986		01551, 01625,		02059, 03465,
Phocus	01308		01651, 02585		01849, 02106,
Pioneer	01457, 01260	SOVOS	02239		02165
PJ	01506	SR Standard	01709	Unicorn	03465
Polaroid	01523, 01687,	Strong	01163	United	02799, 03233,
	02125, 01720,	Sungoo	02037, 01248		03480, 02530,
	01741, 01645	Sunkai	00865		02200, 02663
ProLine	01667, 01545,	Sunstech	02530	Unitek	01709
	01727, 01376,	Superior	01585	Universum	01149, 01163
	02135, 01163,	Supratech	02208	V7 Videoseven	01376, 01666
	02223	SVA	00587, 00865	Venturer	01545, 01727,
Prosonic	01865, 01376,	Sweex	02284		01865, 03005
	01196, 01770,	Swisstec	01776, 02165,	Vestel	01585, 01163
	02125, 02197,		00865, 01376,	Videocon	02548
	00714, 01163,		01849	Videoseven	01376, 01666
	01308, 01585,	Symphonic	01595	Viewpia	02284
	01709, 03480	Tatung	01720, 01248	Vivax	01308, 01709
Q.Media	02339	Taurus	02197	Voxson	02197
Quadro	01149	TCL	02675	Walker	01149, 01585,
Reflexion	02165	TCM	00808, 01308,		02138, 01667,
Relisys	01741, 01376,		02001		02676
	01645	Teac	02168, 03005,	Watson	01376, 01248
Saivod	01163		01645, 02714	Wegavox	01149, 01667
Salora	02197, 02239,	Technica	03465	Wharfedale	01983, 02212
	02001, 02125,	Technika	02426, 01865,	World-of-Vision	02001, 00865
	02676		01983, 01667,	Xenius	01667
Samsung	02051, 00812,		02106, 02212,	Xoro	01196
	02094, 02103,		03005, 03465,		
	02953, 01458,		03067	LCD/Blu-ray Combination	
	01312, 01619,	Techno	01585	Acer	03630, 01339
	01249, 01235,	Technosonic	02032, 00499,	Acoustic	01667, 01865,
	02532, 00587,		00625	Solutions	01585, 02279
	00009	Techvision	01709, 02032	Andersson	01585, 02676
Sanyo	01585, 02676,	Techwood	02676, 01163,	Ansonic	02799
	01208, 03096,		01667	AOC	01589, 02214,
	00208, 01149,	Teckton	01376		03790
	01362, 02279	Teco	01523	Art Mito	01585
Schaub Lorenz	02676	Telefunken	02676, 00808	AS	01667, 01865,
Schneider	01137	Teletech	01149		01585, 02279
SEG	01163, 01149,	Tesco	02426	Asus	03340
	01523, 02673,	Tevion	01248, 02023,	Autovox	01667, 02676
	02719, 01037,		02125, 03465,	Awa	02530
	02125, 02138,		02241, 02339,	Baird	02559, 02212

Beko	02125, 02663, 01308, 02279		02214, 02127, 02005, 02279, 02000	Saba Saivod Samsung	02676, 01585 01667 02051, 00812, 01619, 02953, 02103, 02532, 01458, 01312, 02094
Belson	02032, 02241, 02714, 02868, 01667	Humax Hyundai Inno Hit	01295 02676 02676, 01667, 01585, 02279, 01308		
BenQ	01523			Schneider	01585, 02676
Blue Sky	01149			SEG	02125, 02673, 01523, 02165, 02474, 02719
Brandt	01585, 02676, 01667	ITT	02125, 02675, 02676, 01523 01818, 02118, 02714, 03874, 02676, 00653	Sharp	01659, 02951, 03287, 02676, 01586, 02214, 01393
Celcus	02676, 01585		01585, 02676 02548, 02331 02799	Silva Schneider	02197, 02125
Clarity	01720	JVC	02741, 01423, 02065, 01842 02676, 01667, 01585, 02279	Sinudyne	02676
Crypton	01667			SR Standard	02799
Cyberpix	01667			Strato	02032
Daewoo	01849, 02125, 02246, 02333	Kendo Kenstar Lenco	02799	Sungoo	02037
Digihome	02676, 01667	Level	02373	Sunkai	01523
Dikom	02799	LG	02182, 01840, 02741, 01423, 02065, 01842	Tatung	01720
Dual	02241, 02197, 02032			Taurus	02197
Dyon	02457, 02799			Tech Line	01585
Easy Living	02005, 02023	Linsar	02676, 01667, 01585, 02279	Technical	02676, 01667
ECCG	02197, 02125, 02165	Magnum	02023	Technosonic	02032
Essentials	02486	Majestic	02799	Techwood	01667, 02676
Evesham	01667	Mascom	02125	TELE System	02676, 01585, 01667, 02530
Technology		Matsui	02486, 02279, 01667, 02165, 02561, 02676	Terris	01667
FairTec	01585			Tevion	02241, 02032, 02125, 02339, 02373, 03268, 02289
Finlux	01667, 02676, 01585	Mikomi	01585	Tucson	02676
Foehn & Hirsch	02391	Minerva	01248	Ultravox	01585
Funai	01817	Mivar	00609	United	02799, 03233, 03480, 02530, 02663, 01523, 01770, 02125, 02279
Gold	02023	Murphy	02005, 02673, 02246		
Goodmans	01667, 01585, 01163, 02393, 01523, 02053, 02223, 02127, 02165, 02676, 01645, 01687, 02214	Nordmende	02548, 02331, 02676, 02332, 01149, 01585, 01667		
Gorenje	02676, 01585	Odys	02719, 02799, 02165, 02530		
Graetz	01585, 01163, 01667, 01149	Onei	01667		
Grundig	03433, 02890, 02663, 02125, 02239, 01523, 01667, 02127, 02053, 01223, 01645, 02200, 02561, 02676	Onn	02125, 01667, 02279	Videocon	02548, 02331
Haier	03790, 02212, 02214, 02530, 01983	Palsonic Panasonic Polaroid	03480 01636, 03825 01645, 01720, 01523, 02676, 03589	Visual	02106
Hannspree	02786, 03430, 02818	ProLine	01667, 01585, 02676, 02135, 02223, 02393, 02637	Innovations	
Hisense	02037	Prosonic	01849, 02125, 02279, 02663, 02676, 03480	Westwood	01585
Hitachi	02676, 02207, 01585, 01667,	QONIX Quadro Red	02165 01667 02032	Wharfedale	01983, 02212, 01667
				Xenius	01585, 01667, 02676
				Zepto	01585
				Ziggo	01818
				LCD/Blu-ray Recorder/ SAT/Digital Terrestrial/PVR Combination	
				Philips	03614

LCD/Blu-ray/Digital Terrestrial/Cable Combination

Samsung 02051
 Sony 02778

LCD/Digital Terrestrial/Cable Combination

Acer 03630
 Acoustic Solutions 01865
 Andersson 02676
 Arçelik 03433
 AS 01865
 Bush 02053
 Ferguson 02053
 Finlux 01667, 02676
 Gold 02023
 Goodmans 02053
 Gorenje 02676
 ITT 02676
 Kendo 02676
 LG 01840, 02182, 02741
 Luxor 02676
 Metz 01533
 Minerva 01248
 Mirai 01852
 OK. 02676
 Orion 02005, 02000, 02676, 02108
 Philips 02800, 01887, 03614, 01506, 01867, 02813, 01744, 02680, 02768
 Samsung 02051, 02532
 Sanyo 01585
 Schaub Lorenz 02676
 Sharp 01659, 03287, 02951, 02676
 SilverCrest 02676
 Sony 01825, 02778, 02585
 Sungoo 02037
 TCL 02675, 03971
 Technika 01865, 02426
 Thomson 02675, 03047, 03971
 Toshiba 01508, 02676, 02732, 02775, 02598

LCD/Digital Terrestrial/Cable/PVR Combination

Blaupunkt 03465, 02426
 Changhong 03434
 CHL 03067

CMX 02868
 Grundig 03433, 02890, 02663, 02561, 02676
 Hannspree 03430
 Orion 02676
 Telefunken 02676, 01585, 01667, 02799
 Walker 02676

LCD/Digital Terrestrial/PVR Combination

AEG 02530
 Akura 02289, 03268, 01667, 01585
 Alba 02676, 03067, 01585, 02561, 03790, 03005, 01667, 01865
 Belson 02714, 02868
 Bluetech 02799
 bogo 02561
 Bush 02214, 03790, 03964, 03005, 02673, 02676, 03589, 01667, 02053, 02125, 01645, 01983, 02530, 01585, 01589, 01687, 02059, 02127, 02212, 02241, 02457, 02719
 CMX 02868, 02832, 02799, 03067

DGM 02718
 Dighome 02676
 Dikom 02799
 Dunlop 02799
 e-motion 02426, 03465
 Evotel 02561, 02559, 03589, 02637
 Grandin 02832, 02125, 02676
 Grunkel 02799
 Haier 02530
 Handic 02676
 Höher 03434
 i-Joy 02713, 02868, 02284
 Isis 02676
 Jay-tech 03067
 JTC 03067
 JVC 01818
 LG 01840
 Logix 03465
 Lowry 03268

Matsui 02486, 02561
 Nevir 02799, 02474
 NPG 03434
 Polaroid 03589
 Q.Bell 02561
 Schaub Lorenz 02676, 03268
 Seeltech 03268
 Sencor 03067
 Sharp 02676, 01659
 Shinelco 02530
 Sogo 03067
 Sunstech 02530
 TCL 02675
 Technical 02676
 Technika 02426, 02197, 03465, 02676
 Telefunken 02676, 01667
 Tevion 03268
 Thes 02947
 Thomson 02675
 Tokai 02832
 Toshiba 01508

LCD/DVD Combination

Acoustic Solutions 01545, 01865, 02279
 Akai 02676, 01865, 02197
 Akura 02289, 01770, 02059, 02239
 AS 01545, 01865, 02279
 Conia 02410
 Currys Essentials 02486
 Dantax 02676
 Denver 01770, 02197, 03067, 02239
 Dual 02197, 02241, 02279
 D-Vision 02197
 Finlux 02676
 Funai 01394, 01595
 Gold 01770
 H & B 02001
 Logik 03005, 02486, 03428, 01687, 01865
 Medion 02676, 02719, 02239, 03067, 02279
 Onyx 01770
 Opera 01770
 Philips 02800
 Plustron 01770
 Powerpoint 01770
 Prosonic 01770, 01849,

	02197, 02279, 01545, 01865, 02001, 02676	Digihome	02059, 02284	Saga	02197
		Digimate	02676	Salora	02197, 02239
Q.Media	02339	diVision	02239	Sansui	02832
RefleXion	02239	DMTech	02197, 02239	Sanyo	02676, 01585, 02279, 03096, 01667
Rolsen	02001		02001, 01849, 03480	Schaub Lorenz	02197, 02279, 01585, 02289, 02676, 01667, 02125, 01149, 02001, 02241, 03268
Schneider	02676	Dyon	02457	SEG	02719
Sens	01865	Easy Touch	02059	SOVOS	02239
Sunstech	02001	ECG	02197, 02125	Supratech	02208
Sweex	02284	Ferguson	02676, 03005, 02279, 02426, 03455, 02053, 02339, 02637, 01585	Swisstec	02106, 01849, 02059
Technica	02168		02127, 01687, 02676, 02426	Tauras	02197
Telefunken	02676, 02239	Goodmans	02197, 02333	Teac	02168, 01645
Thomson	02675, 03047		03433, 02663, 02239, 02127, 02676	Technika	02426, 02197, 02106, 02168, 01865, 01983, 01849, 02059, 01667, 02212, 03005, 02676, 02032, 02125, 03465, 02719
Toshiba	02732, 02676, 02775, 03323	Gran Prix	02676	Techwood	02676
Tosumi	01770	Grundig	01983	Tesco	02426
UMC	02426, 02106, 02168, 01849, 02059, 03465		02197	Tevion	02426, 02241, 02339
United	01770, 02279	Haier	02676, 02279, 02000, 01667	Trevi	02474
Viewpia	02284	Hantarex	01770, 02676	TVE	02239
VisionPlus	02426	Hitachi	02246	UMC	02106, 01849, 02426, 02168, 02059, 03465
Xomax	01770	Hyundai	02239	Venturer	01545, 03005, 01865
Xoro	03067	Ikasu	02676, 02279	Wharfedale	01983
		Ingo Devices	02246		
LCD/DVD/Digital Terrestrial Combination		Inno Hit	02239		
AEG	02197, 02457, 02239, 02530	iPure	02676, 02279		
Agfaphoto	02719	JVC	01376		
Agora	02279		02714, 03874, 02676		
Akai	02676, 01523, 02197, 02832	Kenmark	02637, 02393		
Akira	02333, 02457	Küppersbusch	02676		
Alba	02676, 03067, 03005, 01865	Linetech	02676		
Amitech	01849	Linsar	02676, 02279		
Axdia	02719, 02799, 02165, 02530	Luxor	02676		
Azuki	02239	Marks & Spencer	02246, 02673, 01770		
Baier	02239, 02165	Matsui	02486, 02279, 02676		
Bauer	02197	Medion	02719, 02676, 01667, 02279		
Beko	01545, 02239, 02279	Murphy	02673, 02246		
Belson	02241, 02714, 02032	Neon	02673, 02246		
Brandt	02676	Nevir	02474		
Bush	03005, 01983, 02059, 02127, 02241, 02719	Nikkei	02676, 02197, 01585, 01667		
Celcus	02676	Nordmende	02001, 02548		
cello	02673, 02246, 01770	Odys	02719, 02799		
Daewoo	01849, 02333	OK	02676, 03434		
Denver	01770, 03067, 02239	OKI	02676, 02279		
DGM	02239, 02718,	Onn	01770, 02279		
		Orion	02000		
		Pro Vision	02197		
		ProLine	02135, 01545, 02676, 02637		
		Reoc	02197		
				LCD/DVD/Digital Terrestrial/ Cable/PVR Combination	
				Akai	02676, 02832
				Blaupunkt	03465, 02426
				Dyon	02457
				Technical	02676
				Xoro	03067
				LCD/DVD/Digital Terrestrial/ PVR Combination	
				Baird	02559
				Blaupunkt	02426, 03465
				BlueDiamond	03465, 02426
				cello	02673
				CMX	02868
				Digitrex	03194, 03067
				ECG	02197

e-motion	02426	Sony	02778	Rolsen	03067, 03434
Enox.	02673			Salora	02676, 03067
Essentials	02486	LCD/SAT/Digital Terrestrial/ PVR Combination		Samsung	02051, 03975, 01619
Evotel	02559, 02637	Panasonic	01636	SEG	02673, 03434
Ferguson	02426, 02676			Sharp	01659, 02951, 02676
i-Joy	02868	LED TV		Sony	02778, 01825
JMB	02676	Acer	03630	TCL	03047
Logik	02486, 03005, 03428, 01585, 03505	Akai	01523, 03067, 02676	Thomson	03971, 03047
Marks & Spencer	02673	Alba	03587, 02676	Toshiba	03323, 01508, 02676
Medion	02719, 02676	Andersson	02676	United	03233
Neon	02673, 02246	Audiosonic	03067	Videocon	03296
OK.	02676	Axdia	02457		
OKI	02676, 01667, 02125, 02947, 01585, 02279	BBK	02530	LED/Blu-ray/Digital Terrestrial/Cable Combination	
Saba	02676	Blaupunkt	03465	Polaroid	02676
Sharp	02676	BlueDiamond	03465		
Soundwave	02246, 02673	BuBuGao	02530	LED/Digital Terrestrial Combination	
Technical	02676	Bush	03589	Acer	03630
TELE System	02676, 02530	Celcus	02676	Acronn	02561
Tokai	02832	cello	02673	Akura	02289
UMC	02426, 03465	Changhong	03434	Alba	03587, 02676
VD-Tech	03067, 02799	CMX	03296, 02868	Autovox	02676, 01585, 02279
VisionPlus	02426	Dantax	02676	Axdia	02457, 02530
Walker	02676, 01667, 02279, 01585	DGM	02718	Dicra	03233
LCD/PVR Combination		Dual	02676	Digihome	02676
Samsung	02051	Dyon	02530	Dikom	02676, 02561
LCD/SAT/Digital Terrestrial Combination		F&U	02676	F&U	02676
JVC	01818	Finlux	02676	Funai United	02676
LG	02182	Funai	01817	GoGen	02676, 01585
Panasonic	01636	Funai United	02676	Grunkel	01523
LCD/SAT/Digital Terrestrial/ Cable Combination		Grundig	03433, 02663	Jay-tech	03067
Minerva	01248	Haier	02530	JVC	03874, 02676
Panasonic	01636, 03825	Hannspree	03430	Linsar	02676
Samsung	02051	Hitachi	02676	Luxor	02676
Sony	02778, 01825, 02585, 01625	Isis	02676	Odys	02457, 02530
Toshiba	01508	Jay-tech	03067	Technika	02676
LCD/SAT/Digital Terrestrial/ Cable/PVR Combination		JTC	03067	Telefunken	02676
Changhong	03434	JVC	03874, 01601	United	03233, 03296, 03434
Grundig	02890, 02663	LG	01840, 02741	Zepto	01585
Hitachi	02676	Linsar	02676	LED/Digital Terrestrial/Cable Combination	
Loewe	01884	Medion	02676	Akai	02676, 03067
Philips	02800, 03614, 01867	Miia	02868	Dyon	02530
Schaub Lorenz	02676	Mystery	03296	JVC	03874
		Odys	02457	Nevir	02676
		OK.	03802, 03434, 02676, 03047	Nordmende	02676
		Orion	02676	OK.	03802, 03434, 02676, 03047
		Panasonic	01636, 03825	Saba	02676
		Panavideo	03825	Salora	02676, 02197
		PEAQ	03649		
		Philips	02800, 03614, 02768, 03678, 01887, 01867, 02374		
		Polaroid	03296		
		Prosonic	02676		

Samsung	02051, 03975
Schaub Lorenz	02676
Sinudyne	02676
TCL	03047
Thomson	03047, 03649, 03971
Toshiba	03323, 01508, 02676

**LED/Digital Terrestrial/
Cable/PVR Combination**

CHL	03067
DNS	03434
Dyon	02530
GoGen	02676
Grundig	03433, 02890
Hannspree	03430
Hitachi	02676
Nordmende	02676
OK.	03047
Sharp	01659, 02676, 02951
Telefunken	02676

**LED/Digital Terrestrial/PVR
Combination**

Belson	03296
BlueDiamond	02426, 03465
Bluetech	02561
Bush	03589, 02676, 03964, 03587
CMX	02868, 03296
Continental	02530
Edison	
Dikom	02561
Finlux	02676
Haier	02530
Hitachi	02676
i-Joy	03067
Isis	02676
Kogan	03296
Logik	03802, 03428, 02486, 03005
Miia	02868
Nevir	02676
NPG	03434
Polaroid	03296
Q.Media	02799
Saba	02676, 02947
Selecline	03296
Sencor	03067
Sogo	03067
Sunstech	02676
Walker	02676

LED/DVD Combination

Blaupunkt	02426
-----------	-------

Curtis	02559
Dual	02676
e-motion	02426
Finlux	02676
Kogan	03296
Lenco	02676
Polaroid	02676
Q.Media	02339
Shivaki	02197
Technika	02426
Techwood	02676
Toshiba	03323, 02676

**LED/DVD/Digital Terrestrial
Combination**

Akai	02676, 03067
Alba	03587
Axdia	02457
Bush	02676, 03587
Celcus	02676
Digihome	02676
Jay-tech	03067
JTC	03067
Luxor	02676
Nikkei	02279
Odys	02457
Polaroid	02676, 03296
Salora	02676, 02197
Sencor	02197, 03067
Toshiba	03323, 01508, 02676

**LED/DVD/Digital Terrestrial/
Cable Combination**

OK.	03802
Prosonic	02676

**LED/DVD/Digital Terrestrial/
Cable/PVR Combination**

Dual	02676
Lenco	02676
Mascom	02197
Orion	02676
Sharp	02676
Sunstech	02676
Technical	02676

**LED/DVD/Digital Terrestrial/
PVR Combination**

Akai	03067
Autovox	02279
BlueDiamond	02426, 03465
cello	02673
CMX	02868, 03296
Curtis	02559
e-motion	02426
Inno Hit	02676, 01667

Linsar	02676
Logik	03802, 03005, 02486, 03428
mp man	03296
Sandström	03802, 02197, 03047
Telefunken	02676
Toshiba	03323, 02676
Videocon	03296

**LED/DVD/SAT/Digital
Terrestrial/Cable Combination
SEG**

	02673, 03434
--	--------------

**LED/DVD/SAT/Digital
Terrestrial/Cable/PVR
Combination**

Blaupunkt	03465, 02426
cello	02673
Philips	02800, 03614, 03678
SEG	02673

**LED/DVD/SAT/Digital
Terrestrial/PVR Combination**

Panasonic	01636
SEG	02673, 03434

LED/PVR Combination

DGM	02718
-----	-------

**LED/SAT/Digital Terrestrial
Combination**

Grundig	03433, 02890, 02663
Orion	02005
United	03434

**LED/SAT/Digital Terrestrial/
Cable Combination**

Grundig	03433, 02890, 02663
Sony	02778
Toshiba	03323, 02676

**LED/SAT/Digital Terrestrial/
Cable/PVR Combination**

Changhong	03434
CMX	02868
LG	01840
Metz	01533
NPG	03434
OKI	03434
Sharp	02951, 01659, 02676, 03287
Vestel	02676

LED/SAT/Digital Terrestrial/PVR Combination					
Grundig	03433, 02890, 02663	Innowert iPure	00865, 01298 01694	Toshiba	00650, 01508, 02598
OKI	03434	JVC	02943, 00653, 01774	UMC	02165
Q.Bell	02561	Kendo	01163	United	01163
SEG	02673, 03434	L&S Electronic	00808, 00865	Universal	00037
		LG	01840, 01305, 01423, 02182, 02358, 00178, 00037, 02065	Universum	01163, 00808
Mobile LCD				V2max	00865
Digatron	00037			Vestel	01585, 01667, 01163
		Luxor	01163	Vistron	01363
Plasma TV		Matsui	00443, 00744	Vivax	01308
Advent	01694	Medion	00808, 01248, 01667	Vivid	01308
AEG	01163			Walker	01163, 01149
Airis	01694	Metz	01163	Wilson	00556
All Tel	00865	Micromaxx	00808	World-of-Vision	01298
Amstrad	01163	Microstar	00808	Xenius	00661, 00634
Andersson	01163	Myrica	01298	Xiahua	01196
Baird	01196	NEC	00170	Xoceco	01196
Basic Line	01163	Neovia	00865	Xogego	01196
Beko	00808, 01308	Nordmende	01308	Yamaha	01576, 00650
Black Diamond	01163	Orion	00443, 01196	Zenith	00178
Blue Sky	01363	Panasonic	01636, 00650, 03825, 01650		
Cat	01682			Plasma/Digital Terrestrial/Cable Combination	
Changhong	03434	Philips	00556, 01887, 00639, 01744, 01506, 01798	Samsung	02051, 03975
Conrac	00808				
CPTEC	01363	Phocus	01308	Plasma/Digital Terrestrial Combination	
Cytronix	01298	Pioneer	01457, 01260, 00679, 01636	Gorenje	01585
Daewoo	00661, 00865			Hisense	02037
Dantax	01163	Pragma Digital	00808	Hitachi	02207
Dual	01163, 01667	Prima	01196	ITT	01694
Fenner	01163	Quasar	00865	Ministry Of	01667
Finlux	00808, 01585	Relisys	00865, 01585	Sound	
Firstline	01363, 00808, 01308	Revox	00808	Philips	01506
Force	01149	Samsung	02051, 01458, 02094, 00812, 02103, 01249, 03975, 01312, 02953, 00618, 00170	Prosonic	01523
Fujimaro	00865			Relisys	01585
Fujitsu Siemens	01298, 01163	Sanyo	00170	Sony	01625
Funai	01394	SEG	01163	Vestel	01667
Gericom	01298, 00865, 00808	Sharp	01586, 00093		
Goodmans	00808, 01163, 01308, 01585	Sliding	00865	Plasma/Digital Terrestrial/PVR Combination	
Graetz	01163	Soemtron	01298, 00865	LG	01840, 01423
Grandin	00865	Sony	01551, 01625, 01651		
Grundig	01223	SR Standard	01709	Plasma/PVR Combination	
Grunkel	01163	Sunkai	00865	Hitachi	02207
H & B	00808	SVA	00865		
Hanseatic	00808	TCM	00808	Plasma/SAT/Digital Terrestrial Combination	
Hantarex	00865	Tech Line	01163	Pioneer	01457
Harsper	00865	Techwood	01163		
Hisense	01363, 02037	Telefunken	01556	Plasma/SAT/Digital Terrestrial/Cable Combination	
Hitachi	01576, 02207, 00679	Tevion	01298, 01248, 00808, 01645	LG	01840
Höher	01163, 00865	Thomson	00625	Samsung	02051
Hyundai	01694, 00865				
Inno Hit	01163				

Plasma/SAT/Digital Terrestrial/ Cable/PVR Combination	AEG	01556, 01163, 01324	Brinkmann	00486
Panasonic 01636, 03825	Aiwa	00701	Brionvega	01608
	Akai	00480, 00361, 00715, 00714, 00037, 01326, 00208, 00606, 01652	Bush	01037, 01652, 00714, 00668, 00037, 00556, 01556, 01916, 00009, 02007, 00443, 00661
Portable LCD/Digital Terrestrial Combination				
Sony 01825				
Portable TV	Akito	00037	Camper	00037, 00486
Philips 00556	Akura	00714, 00037, 00668, 01037, 01556	Carad	01037, 00668
SEG 01163			Carena	00037
			Cathay	00037
PVR	Alba	01037, 00037, 00714, 00443, 00668, 00009, 00480	Centrex	00826
Arçelik 03433			Centrum	01037
Philips 03614			Cimline	00009
Sony 02778			Cinex	01556
Xoro 03067	Alien	01037	Classic	00499
	Amitech	00655	Clatronic	00714, 01324
Rear Projection TV	Amstrad	00009, 00037	Clayton	01037
Akai 02532	Anglo	00009	CME	00037, 00361, 00512, 00009, 00035, 00226
Epson 01290	Ansonic	00668, 01437		
JVC 00653, 01774	Ardem	00714, 00037, 00486	Condor	00009, 00037
Pioneer 00679			Conrac	00808
Samsung 01249, 00812, 02532, 02953, 00618, 01312	Arena	00037	Contec	00009, 00037
	Aristona	00556	Crown	00037, 00714, 00009, 00208, 00486, 00668, 00715, 01037, 02200
Sanyo 00208	ART	01037		
Seiko Epson 01290	ASA	00346		
Sony 01625, 01651, 01825, 01505	Audiosonic	00714, 00037, 00009, 00374, 00865		
Telefunken 01882	B & O	00565, 00620	Curtis	01326
Thomson 01882, 00625	Bang & Olufsen	00565, 00620	Daewoo	00634, 00661, 00499, 03110, 00374, 00624, 00556, 00037, 00451, 00009, 00037, 00208
Toshiba 01508, 02598, 03323, 03130, 02775	Basic Line	00668, 01037, 00009, 01149	Dansai	00037, 00208
	Baur	00512, 00361	Dantax	01037, 00714, 00715, 01652, 01667
	Beaumarck	00178		
Rear Projection TV/Digital Terrestrial Combination	Beko	00714, 00486, 01652, 00715, 00037, 01308	De Graaf	00208
Sony 01625, 01825			DEC	01326
Toshiba 03323	Belson	00698	Decca	00037
	Beon	00037	Desmet	00037
SAT/Digital Terrestrial Combination	Berthen	00556, 00668	Dixi	00037
Grundig 02663	Bestwell	01326	Domeos	00668
	Black Diamond	01037	Dual	01037, 01137, 00714, 01667
SAT/PVR Combination	Blaupunkt	00195, 00191	Durabrand	01437, 00714, 01037, 01652
Grundig 03433	Blue Sky	00714, 01037, 00668, 00037, 00556, 00625, 00715, 00499, 01652		
Satellite			D-Vision	00037, 00556
B & O 00565	Boca	01652	Dynatron	00037
Bang & Olufsen 00565	Boman	01324	E:max	01324
Grundig 00195	Boots	00009	Elbe	00556
Philips 00556	BPL	00208	Elfunk	01208
Toshiba 00035	Brandt	00625, 01882, 00560, 00335, 00714	Emerson	00486, 00668, 00714
Television				
A.R. Systems 00374				

Epworth	00701	Hinari	00009, 00037		00009
Erisson	01682	Hisawa	00714	Lodos	01037
Europa	00037	Hitachi	00744, 01037, 00578, 00634, 02676, 00499, 01576, 00037, 01137	Loewe	00512, 00633
Excello	01037, 01326			Luma	01037
Exquisit	00037			Lumatron	00668
Ferguson	00625, 00335, 01037, 00560, 00443, 01882, 00037, 00195	Höher	00714, 01556	Luxor	00361, 01037
		Home	00606	Madison	00037
Fidelity	00512	Electronics		Magnum	00714, 00037, 00715
Finlandia	00346	Huanyu	00374	Manesth	00037
Finlux	01667, 00346, 00714, 02676, 00037, 00556, 00715, 01556	Hypson	00556, 00714, 00715, 00486, 00668, 01037	Manhattan	00037, 01037
		Hyundai	01326	Marantz	00037, 00556
Firstline	00714, 01037, 00668, 00009, 00556	Ideal	01556	Mark	00037, 00714, 00715
		Imperial	00037	Mascom	01556
Fisher	01362, 00208	Indiana	00037	Masters	00037, 00499
Fraba	00037	Ingelen	00714, 01324	Masuda	00009
Funai	01037, 00714, 00668	Inno Hit	01037	Matsui	02007, 00443, 00009, 00037, 00208, 00714, 00195, 01037, 00035, 00556,
		Inspira	01556		01556
Gaba	01037	Interfunk	00037, 00361, 00512	Maxim	00714, 01037,
GEC	00037	Internal	00556, 00624	Medion	00668, 01437,
Geloso	00009	Intervision	00037		00698, 00808,
Goldfunk	00668	ITT	00361		01137, 01248,
GoldStar	00714, 00037, 00606, 00715	ITT Nokia	00361		01556
		JMB	00634, 00443, 00556, 00499	MEI	01037
Goodmans	00634, 01037, 00499, 00037, 00668, 01916, 00714, 00560, 00374, 00556, 00625, 00661, 01983	JVC	01774, 00653, 02943, 02118, 00606, 01601, 00093, 00650	Meletronic	00346, 00480, 00009, 00195, 00634, 00361, 00374, 00512, 00661, 00714, 01652
		Karcher	01556, 00606, 00714, 01324		00463, 01037
Graetz	00361	Kathrein	00556	Memorex	00625
Granada	00037, 00208	Kendo	01037, 01437, 00037, 01137, 02138	Metronic	00746, 00447, 01037, 01533
Grandin	00714, 01037, 00715, 00037, 00556, 00668, 01652			Metz	00714, 01324
		Kennex	01037	Micromaxx	01667
Grundig	00195, 01223, 00580, 00191, 00443, 00556, 01308, 02007, 02890, 03262, 00587, 00706, 02663	Kiton	00668	Mikomi	00037
		Kneissel	00499, 00037, 00374, 00556	Minato	01556
			00037, 00512, 00009	Mitsai	00108, 00512,
		König	00009	Mitsubishi	01037, 00037,
		Konka	00009, 00037, 00714	Electric	00556
				Mivar	00609
		L&S Electronic	00714	MTC	00512
Haier	00698	Lavis	01037	MTlogic	00714
Hanseatic	00661, 00714, 00361, 00634, 00556, 00625, 00037	Lecson	00037	Multitec	01037, 01556
		LG	00714, 00037, 00715, 01149, 01423, 00178, 00556, 00698,	Myryad	00556
Hantarex	00420, 00009		01840, 01305,	NAD	00037
HB	00714, 01324		00668, 01037,	Naiko	00037, 00753
HB Ingelens	00714, 01324	Lifetec	00714, 01137,	NEC	00170
HCM	00009			Neckermann	00556, 00191
				NEI	00037, 01037
				NEO	01324

Neufunk	00714	Profilo	01556	Shivaki	00037
New Acoustic	00037	ProLine	00634, 00625,	Siemens	00195, 00037,
Dimension			00037, 01037		00191
Nikkai	00037, 00035	Prosonic	00714, 00606,	Siera	00556
Nikkei	00714		01324, 01667	Silva Schneider	00037, 01556
Nokia	00480, 00361,	Protech	00037, 00668,	SilverCrest	01037
	00606, 00346		00009, 01037	Sliding	01324
Nordmende	00560, 01882,	Pye	00037	SLX	00668
	00714, 01163	Quadro	00753, 01326	Sogo	00606
Nortek	00668	Quelle	00512, 00037,	Sonitron	00208
O.K.Line	01324, 01037,		00361, 01037	Sonoko	00009
	01556	Radiola	00037, 00556	Sonorlor	00208
Oceanic	00361	Radiomarelli	00037	Sony	01651, 00651,
OK Line	01324, 01037,	Radionette	00714		01551, 01505,
	01556	Radiotone	00668, 00037,		02585, 01825,
Okano	00009		01037		02778, 01625
OKI	02200	Redifusion	00361, 00346	Soundwave	00037, 00715
Onimax	00714	Reoc	00714	SR Standard	00009, 00374
Opera	00714, 01308	Revox	00037	Starion	01037
Orava	01149	Roadstar	01037, 00009,	Strato	00009
Orion	02007, 00443,		00714, 00668,	Sunny	00037
	00655, 00714,		00715	T+A	00447
	00037, 00556,	RTF	00037	Tatung	00037, 01324,
	01916, 02032	Saba	00625, 00560,		01556
Otto Versand	00512, 00037,		01882, 00335,	TCL	03047
	00191, 00556		00714	TCM	00714
Pacific	00714, 00443,	Saivod	01037, 00668,	Tec	00037
	01037, 01137,		00037, 01556	Tech Line	01437
	00556, 01324	Salora	00361, 00480	Technicolor	01882
Palladium	00655, 00714,	Samsung	00618, 01458,	TechniSat	00655, 00556
	00037, 01137		00587, 02051,	Technisoon	00714, 01652
Panasonic	01650, 01968,		01249, 00037,	Technosonic	00556, 01324
	00650, 00226,		00556, 00009,	Techwood	01037
	01636		00812, 01312,	Tecnimagen	00556
Philips	00556, 00037,		02103, 02953	Telefunken	00625, 00560,
	02660, 01887,	Sansui	00655, 00706		01882, 00335,
	01798, 02485,	Sanyo	01208, 00208,		00714
	02374, 02813,		01362, 03096,	Telestar	00556
	01744, 03614,		02676, 01585,	Tensai	01037
	01506, 01867,		01149, 01037	Tesla	01137, 01037,
	00639, 00512,	SBR	00556		00037, 00556,
	02800, 00374,	Schaub Lorenz	00714, 00361,		00714, 01652
	02015		01324, 00374,	Tevion	00714, 01137,
Phocus	00714, 01652		00486, 00606		01037, 00556,
Phoenix	00037	Schneider	01137, 00037,		00668, 01556
Phonola	00037		00714, 01037,	Thomas	00625
Pilot	00706		00556, 00668	Thomas America	00625
Pioneer	00679, 00037,	Schöntech	01037	Thomson	00625, 01882,
	00361	Seaway	00634		00560, 03047
Pionier	01556	Seelver	00556, 01037	Thomson Life	01882
Playsonic	00714, 01652,	SEG	01037, 00668,	Thorn	00035, 00499,
	00037, 00715		01163, 01437		00361, 00512
Policom	00361	Sencor	00714	Tokai	00037, 00668,
Powerpoint	00037	Sentra	00035		01037
Prinston	00715	Sharp	00093, 01193,	Tokaido	01037
Pro Vision	00714, 01324		03119, 01586,	Toshiba	01737, 01508,
Profex	00009, 00361		02951		00035, 02598,

	00508, 02775, 03130, 00618, 00767, 01037, 00195, 02676, 03323	Beko	02200, 01308, 01652	Logik	02486, 03428, 03005, 03802
	00556, 00668, 01037	Belson	02868	Logix	03465
	00480	Blaupunkt	03465	Luxor	02676
TRANS-		BlueDiamond	03465	Matsui	02486
continents		BuBuGao	02530	Medion	02676, 01585, 02239, 03067
Uher		Bush	03790, 03589, 01667, 02053, 02530, 02676	Miia	02868
United				Mikomi	01585
	00037, 00556, 01037, 01652	Celcus	02676	Mystery	03296
	01037, 00346, 00480, 01437, 00009, 00037, 00512, 00618, 00668	Changhong	03434	Neon	02673
Universum		CHL	03067	Odys	02457
		CMX	02868, 03296, 03067	OK.	03802, 02676, 03434, 03047
	00037	Daewoo	03110, 02246	Orion	02005, 02108, 01037
Vanguard		Dantax	02676	Panasonic	01636, 03825, 01650
Venus		Denver	01770, 03067		03825
Vestel		Digitrex	03067	Panavideo	03649
Videoccon		DMTech	03480	PEAQ	02800, 02768, 03614, 01506, 01887, 02374, 01744
Visa		Donghai	02832	Philips	01457
	00037, 00009, 00361, 00374	Dual	02197, 02676		02676, 03296 02676, 03480 02165, 02239 02676, 02001, 01215
Vision		Dyon	02530		02051, 03975, 00812, 02953
Vivax		Electrolux	01585		02676, 01585, 01208, 02279
Voxson		e-motion	02426, 01645, 03465		01523, 02673, 03434
Waltham		Essentials	02486	Pioneer	02951, 02676, 01659, 03287
Watson		Evotel	03589	Polaroid	02239
	01437, 00009, 00714	F&U	02676	Prosonic	02530
	00714, 01652	Ferguson	02053, 03455, 02339	RefleXion	02675, 03971, 03047
Welltech		Finlux	02676, 01667	Salora	03323, 02676, 01508, 02598
Wharfedale		Fisher	01585	Samsung	02168, 02426, 03465
	00556, 01556	Funai	01817	Sanyo	02676, 01585, 01208, 02279
White		Funai United	02676	SEG	01523, 02673, 03434
Westinghouse		Goodmans	01523, 02053, 02676	Sharp	02951, 02676, 01659, 03287
Wilson			02676	Shivaki	02197
Windsor		Gorenje	03433, 01523, 02053, 01223, 02200, 02125	Sony	02778, 01651, 02585
Windy Sam		Grundig	02676	SOVOS	02239
Xiron			02676, 01585, 02127	Sunstech	02530
YU-MA-TU		Haier	02530, 03790	TCL	02675, 03047
		Hannspre	03430, 02786	Teac	03005
TV/Digital Terrestrial Combination		Hitachi	02676, 01585, 02127	Technica	03465, 02168
Acer			01295	Techwood	02676, 01667
Acoustic		Humax	02676	Tesco	02426
Solutions		Isis	03067	Tevion	02339
AEG		Jay-tech	03067	Thomson	02675, 03971, 03047
Akai		JMB	02426	Toshiba	03323, 02676, 01508, 02598
Akura		JTC	03067	UMC	02168, 02426, 03465
Alba		JVC	02118, 03874	United	03233, 02799, 03480, 02530
	03790, 02561	Kendo	02676		
Andersson		Kogan	03296		
AOC		Lenco	02676		
AS		LG	01840, 01423, 02182		
Audiosonic			02676		
Axdia		Linsar	02676		
BBK		Loewe	01884		

Grundig 02890, 03433
 Haier 02530
 Hannspree 03430
 Hitachi 02676, 02207
 i-Joy 02713
 Isis 02676
 Kogan 03296
 LG 01840
 Linsar 02676
 Loewe 01884
 Logik 02486, 03428,
 03802
 Logix 03465
 Matsui 02486
 Medion 01741
 Miia 02868
 Mystery 03296
 Neon 02673
 OK 03802
 OKI 02676
 Orion 02676
 Panasonic 01636, 03825
 PEAQ 03649
 Philips 02660, 03614,
 01867, 02374,
 02813
 Polaroid 03296
 Prosonic 02676
 Rolsen 03067, 03434
 Samsung 02051, 03975,
 00009, 00587,
 00812, 01235,
 01249, 01312
 Sanyo 02676
 Sharp 02676, 01659
 Sony 02778
 Sunstech 02530
 TCL 03649, 02675
 Technica 03465
 Technika 02426
 Tevion 03465, 02426
 Thes 02947
 Thomson 02675, 03649
 Toshiba 03323, 02676
 UMC 02426, 03465
 Unicom 03465
 Videocon 03296
 VisionPlus 02426
 Xoro 03067

TV/SAT Combination

Changhong 03434
 Grundig 02125, 03433
 Hitachi 02676
 LG 01840, 00037
 Loewe 01884
 Logik 03005

Metz 01533
 Minerva 01248
 Orion 02108, 02000,
 02005
 Panasonic 01636, 03825,
 01650
 Philips 02800, 03614
 Pioneer 01457
 Samsung 02051, 03975
 SEG 03434
 Sharp 02951, 01659
 Sony 02778, 01651
 Technosonic 02032
 Tevion 02373
 Toshiba 03323, 01508,
 02732
 Wharfedale 01983

TV/VCR Combination

Aiwa 01916
 B & O 00565
 Bang & Olufsen 00565
 Blue Sky 00624, 01916
 Bush 01916, 00374
 Daewoo 00624
 Dantax 01916
 Epworth 01916
 Ferguson 00625, 01916
 Firstline 00624
 Goodmans 01916, 00624
 Grandin 00624
 Grundig 00037, 00195,
 00556, 01916
 Internal 00624
 LG 00178
 Matsui 01916
 Mitsubishi 00556
 Electric
 Orion 01916
 Pacific 01916
 Philips 00556, 00037
 Radiola 00556
 Roadstar 01916
 Schneider 00556, 00037
 SEG 00624, 00634
 Sharp 00093
 Siemens 00195
 Sony 00651, 01505,
 01651
 Tatung 01916
 Technics 00556
 Thomson 00625
 Toshiba 01916
 United 01916

VCR

B & O 00565, 00620

Bang & Olufsen 00565, 00620
 GoldStar 00037
 Grundig 00191, 00195
 JVC 00606
 Mitsubishi 00108
 Electric
 Panasonic 00650, 00226
 Philips 00037, 00639
 Sanyo 00208
 Sharp 00093
 Siemens 00195
 Sony 00651, 01651

Video Monitor

LG 01423
 Philips 00556

Video Projector

Acer 01644
 Epson 01290
 Sanyo 01649
 Seiko Epson 01290

VIDEO – DVD

Acoustic Solutions 20730
 Akura 20898
 Alba 20713, 20539,
 20672
 Amstrad 20713
 Arcam 20732
 AS 20730
 BBK 21224
 BuBuGao 21224
 Cambridge 21109, 21471
 Audio
 Chili 21493
 Clatronic 20788
 Clayton 20713
 CyberHome 21023, 20816
 DAK 22235
 Dansai 20770
 Daytek 20872
 Denon 21634
 Denver 20898, 21316
 Dirmce 22235
 DK Digital 21643
 Durabrand 22284
 Dyon 23076
 ECC 20730
 Elta 21115
 Eltax 21620, 21624
 Enterprise 20591
 Ferguson 20898
 GoldStar 20741
 Goodmans 20790, 21004
 GoWell 21643

Grunkel	21316, 21493	Oppo	22545	Technics	20490
H & B	20841, 20850	Panasonic	23580, 24190, 23862	Yamaha	20545
Hitachi	20664	Philips	22789, 21849	Blu-ray	
ITT	21233	Pioneer	22847, 21809, 23041, 22854	Ambiance	23052
Kenwood	20490	Sony	21516	BBK	23527
Kiss	20841	Toshiba	22705	Bluetech	23542
Leiker	20872	Yamaha	23871	BuBuGao	23527
LG	20869	3D Connected Blu-ray Home Cinema		Bush	22723
Matsui	20672	Harman/Kardon	23744	Cambridge	22808
Mustek	20730	LG	22811, 23996, 21602	Audio	
Muvid	22173	Panasonic	23901, 23935	Dyon	23052
NAD	20741	Philips	21849, 23147, 22789	Foehn & Hirsch	23052
Nevir	20831	Pioneer	21809, 21997, 22854	Funai	20675
New Acoustic	20741	Samsung	22951	Grundig	22723
Dimension		Sony	22504, 23964	Harman/Kardon	23744
Olidata	20672	3D Connected Blu-ray Recorder/Digital Terrestrial/Cable/IPTV/PVR Combination		Hiteker	23052
Oritron	20651	Panasonic	23580	i-Joy	23052
Pacific	20831	3D Connected Blu-ray Recorder/SAT/PVR Combination		Lenco	23052
Panasonic	20632	LG	24090	Lexicon	22545, 22546, 22547
Philips	21354, 20539, 20675, 22049, 22056	Sagemcom	24190	LG	21602, 20741, 22811, 24090, 23996
Pioneer	20631, 20632	3D Connected Blu-ray/Digital Terrestrial/Cable/PVR Combination		Limit	23052
Roadstar	20713, 21051	Samsung	23195, 20199	Logik	23542
Samsung	22369	3D Connected Blu-ray/Digital Terrestrial/PVR Combination		Magnavox	20675
Seeltech	21643	LG	24090, 21602, 22811	Marantz	23444
Silva Schneider	20831	3D Connected Blu-ray/SAT/Digital Terrestrial/PVR Combination		Medion	23542
SilverCrest	22173	LG	24090	Momitsu	23052
Sistemas	20672	Panasonic	23580, 24190, 22678, 22867	OK	22723
SM Electronic	20730	Audio Receiver		Onn	22723
Sony	20533, 21633	Denon	21844	Oppo	22545, 22546, 22547
Starlogic	21005	Marantz	20539	Panasonic	21641, 23862, 23580, 23901, 23230, 22061, 22062, 23641, 23935, 23642, 22678, 22584, 22710
Starmedia	21005	Panasonic	21908	PEAQ	23527
Technics	20490	Philips	20539	Philips	22789, 21849, 22434, 23147, 22084, 22689
Technika	23633	Sony	22132	Pioneer	21809, 22442, 22847, 21997, 22854
Telefunken	23076	3D Connected Blu-ray player		Samsung	20199, 23195, 22951, 22873, 20298, 23467
Tevion	21036, 21382	Bush	22723	Sherwood	23052
Thomson	20522	Cambridge	22808	Sony	21516, 22020, 22504, 23964, 20772
Toshiba	20503	Audio		Sylvania	20675
TRANS-	20831	Electrocompanie	22545	Technika	23527
continents		t			
Vecatech	21493	Grundig	22723		
Venturer	20790	Marantz	23444		
Wilson	21233				
Yamada	20872, 21004, 21493				
Yamaha	21354				

Toshiba	22705	Digital Terrestrial/PVR Combination	Axxion	23076
Yamaha	23871	Panasonic	Basic Line	20713
Blu-ray Home Cinema			BBK	21224
Harman/Kardon	23744	DVD	Beko	20831
Panasonic	23901, 23230,	3D LAB	Bellagio	21004
	23935, 23642	Acoustic	Belson	21630, 21493
Pioneer	21809, 21997,	Solutions	Belsonic	21493
	22854	Advance	Berthen	21643
Samsung	22951, 22873,	Acoustic	Best Buy	22163
	23467	AEG	BIOSTEK	22630, 21601
Sony	22504, 23964,		Black Diamond	20713
	22020, 21516,		Blu:sens	21233
	22132		Blue Sky	20713, 20672,
Blu-ray Recorder/Digital Terrestrial/PVR Combination		AFK		20651, 20695
Samsung	23195	Airis	Boghe	21004
Blu-ray/Digital Terrestrial/Cable/PVR Combination		Aitro	Boman	21005, 20898
Panasonic	23580	Aiwa	Bork	21152
Samsung	23195	Akai	Brainwave	20770, 21115
Blu-ray/Digital Terrestrial/PVR Combination			Brandt	20651, 20551,
Freesat	22867	AKI		20503
Blu-ray/VCR Combination		Akira	BuBuGao	21224
Panasonic	21641	Akura	Bush	20713, 20730,
Camcorder				20831, 21140,
Sony	20533			21051, 21351,
CD		Alba	Cambridge	23021, 20672
3D LAB	20539		Audio	21109, 21471
Connected Blu-ray		Altacom	Campomatic	21051
Grundig	22723	Amitech	Digital	
LG	21602, 24090,	Amphion	CCE	20730
	22811	MediaWorks	Centrum	20713, 21005
Panasonic	23580, 23862,	Amstrad	CGV	21115
	23641, 22678,		Chili	21493
	24190, 22584		Cinea	20841
Samsung	23195, 20199		Cinetec	20713, 20872
Connected Blu-ray Recorder/Digital Terrestrial/PVR Combination		AMTC	CJ Digital	21643, 22173
Panasonic	23580, 22678,	Amuseer	Classic	20730
	22867, 24190	AMW	Clatronic	20672, 20788,
Digital Media Receiver		Ansonic		21233
Kiss	20396		Clayton	20713
		Apex Digital	CMX	22630, 21601,
		Arcam		23076, 21643
		Arena	Coby	21351
		Aristona	Codex	21233
		AS	Compacks	22235
			Contel	20788
		ASDA	Continental	20831, 20872
		Asono	Edison	
		Aspects	Crown	20713, 20770,
		Atacom		21115
		Audiola	Curtis	22235, 21493,
				23052, 21624
		Audix	Cybercom	20831
		Autovox	CyberHome	20816, 21023
		AVideo	Cytron	20651
		Avol	Daenyx	20872
		Axion	Daewoo	20770, 20872

DAK	22235	Funai	20675, 20695	Jamo	21036
Dalton	21036	Gericom	21004	JDB	20730
Dansai	20770, 21115	Germatic	21051	JMB	20695
Dantax	20713, 21224	Global Solutions	20768	JVC	20623, 22868
Daytek	20872, 21005	Global Sphère	21152	jWin	21051
Dayton Audio	20872	GoGen	22139	Kansas	21233
DCE	20831	Gold	21601	Technologies	
Decca	20770, 21115	GoldStar	20741	Kazuki	21493
Denon	21634, 20634, 20490, 21844	Goodmans	20713, 20730, 20790, 21004, 21152, 20651, 21140, 21316, 21530	Kendo	20713, 20831 20713, 20770, 20898
Denver	22736, 20672, 21601, 20898, 21316, 21493, 20788, 21643	GoWell	21643	Kenwood	20490
Dgtec	20672	GPX	22235	Keymat	21316
Dicra	22173	Gran Prix	20898, 20831	KeyPlug	21643
Diffnce	22235	Grandin	20713, 21233, 22173	Kiiro	20770
Digihome	20713	Grundig	20775, 20539, 20695, 20670, 20790, 20651, 20713, 21004, 21036, 21643, 20770, 21316, 20831, 21493	KingVision	21493, 21620, 21643
DigiLogic	20713			Kiss	20841
Digital	22173			Koss	20651
Digitrex	21004			Lawson	20768
DiK	20831			Lazer	22173
Dinamic	20788			LC Power	21493
Disney	20831	Grunkel	20770, 21316, 20831, 21493	Leiker	20872
DK Digital	20831, 22095, 21643	GVG	20770	Lenco	23076, 20713, 20770
DMTech	22173	H & B	20713, 21233, 20841, 20850, 22173	Lexia	20768
Dragon	20831			LG	20741, 20591, 20869, 21602
Dual	20831, 20730, 20713, 20651, 21023	Hanseatic	20741	Lifetec	20831
Durabrand	20831, 22284, 20713, 21023	Harman/Kardon	20702	Limit	20768
D-Vision	21115	HB	20788	LiteOn	21738
Dyon	23068, 23076	HB Ingelen	20788	LM	21643
E:max	20770, 21233, 21643, 22173	HCM	20788	Lodos	20713
eBench	21152	HE	20730, 21493	Loewe	20539
Ecron	21630	Henß	20713	LogicLab	20768
E-Dem	21224	Hitachi	20664, 20573, 20713	Lumatron	20713, 21115
Elfunk	20850	Hiteker	20672	Luxman	20573
Elin	20770	Höher	20713, 20831, 22173, 20651, 21004, 21224, 21643	Luxor	21004
Ellion	20850			Magnavox	20675, 20539, 21354, 20713
Elta	21115, 20788, 22173, 20672, 20770, 21643, 22630, 20850, 21051, 21233, 21620, 21624	Home Electronics	20730, 20770	Magnum	21152, 21382
Eltax	21620, 21624	Home Tech	21224, 21643	Majestic	21620
Epworth	20533	Industries		Manhattan	20713
EuroLine	20788, 21115, 21233, 21351	HotMedia	21152	Manta	21493
Fenner	20651	HYD	21233	Marantz	20539
Ferguson	20898, 20651	Hyundai	21493, 20850	Mark	20713
Finlux	20770, 20591, 20672, 20741	Ingelen	20788	Matsui	20651, 20695, 21316, 20672, 21004
Firstline	20713	Ingersoll	21023	Maxim	20713, 20872
		Inno Hit	20713	MBO	20730
		Irradio	21233, 21115, 21224	MDS	20713
		ISP	20695	Mecotek	20770
		ITT	21233	Medion	20831, 20651, 22425, 20630, 21382, 21549
				Memorex	20831

Metz	20713, 20525, 20571		21531, 20525, 20631, 20632	SEG	20713, 20768, 20872
Micromega	21005, 20539	Play It	21643	Shanghai OCN	20672
Microstar	20831	Plu2	20850	Sharp	20630, 20713, 20675
Minax	20713	Powerpoint	20872, 21005	Sherwood	20741
Minoka	20770, 21115	Prinz	20831	Siemssen	21382
Mitsubishi	20713	Prism	20831	Sigmatek	21224, 21005, 21620
Electric		Pro Vision	21493, 20730	Siltext	21224
Mizuda	20770	ProLine	20651, 21004, 20672, 21316, 21643	Silva	20788, 20898
Mustek	20730, 21601			Silva Schneider	20831, 20898
Muvid	22736, 21643, 22173, 21493	Proson	20713	SilverCrest	21152, 21643, 22173
Mx Onda	20651, 21601	Pye	20539	Sinudyne	21316
Mystral	20831	QONIX	21051	Sistemas	20672
NAD	20741	Radionette	20741	Skantic	20713
Naiko	20770, 21004	Radiotone	20713	Skymaster	20730, 20768
Naxa	22235	RCA	20522	Skyworth	20898
Neom	21493, 21643	Red	22235	SM Electronic	20730, 20768, 21152
Nevir	20831, 20770, 20672	Red Star	20770, 20898, 20788, 21351	SM Supervision	20768, 21152
New Acoustic	20741	Reoc	20768	Smart	20713
Dimension		Revoy	20841	Sogo	20672, 21493
Nikkai	22836	Richmond	21233, 21549	Sony	21633, 20533, 21533, 21548, 21033, 20772, 21070
Nikkei	20898	Roadstar	20713, 20730, 20672, 20898, 21051	Sound Color	21233
Noblex	23076			Soundmaster	20768
Nordmende	20831, 21316			SR Standard	20768, 20788, 20831, 20898
Nordy	22235	Ronin	20872	Star Clusters	21152
Nortek	21643, 22173	Rotel	20623	Starmedia	21005, 21224
Oasis-Media	21601	Saba	20551, 20651, 21601, 21643, 22173	Stein	21601
OCN	20672			Strato	21152, 21382
OK.	23076			Strong	20713
Olidata	20672	Saivod	20831	Sunkai	20770
Onkyo	20627, 20503, 21769	Salora	22173	Sunstech	20831, 21601, 21620, 21630
Oppo	21224	Samsung	20573, 22843, 23266, 22369, 20744, 22556, 20199, 21635, 20490, 21075, 22765, 22942, 23195	Sunwood	20788, 20898
Orbit	20872			Superior	23076, 22173, 21643
Oriental Cable	20672			Supervision	20768, 21152
Network				SVA	20672
Orion	20695, 21233			Synn	20768
Oritron	20651	Sansui	20768, 21549	Sytech	21601
Ormond	20713	Sanyo	20670, 20713	Tandberg	20713
Pacific	20831, 20713, 20790, 20768	Scan	20850	Targa	20741
Packard Bell	20831	ScanMagic	20730	Tatung	20770
Palladium	20695, 20713	Schaub Lorenz	20788, 22173, 20770, 21115, 21643	TCM	20790
Panasonic	20490, 21641, 21579, 20632, 22710	Schneider	20539, 20651, 20831, 20713, 20788, 20790	Teac	20571, 20768
peeKTon	22100, 22385, 21224, 20898			Tec	20898
Philips	22056, 21354, 20539, 22695, 22926, 22371, 21846, 22334, 20646, 23353, 23004, 20503	Schöntech	20713	Technics	20490
		Scientific Labs	20768	Technika	21115, 20770, 20831, 23429, 23633, 21316
		Scott	20672, 21005, 21036, 22173, 20651, 21233, 21630		
Pioneer	21571, 20571,	Seeltech	21224, 21643		

	21630, 23021	Xbox	20522	Home Tech	21923
Technisson	21115, 20672	Xeos	21549	Industries	
Technosonic	21115, 21005, 21051, 21549	Yakumo	21004	Irradio	21233
		Yamada	21004, 20872, 21493, 23021	JVC	21901, 20623
TechnoStar	21643, 22173, 22630	Yamaha	20539, 20545, 20490, 20497, 21354, 21840	Kenwood	21906
Techwood	20713		20872, 21549	KXD	21923
TELE System	22173	Yamakawa	20730	LG	22189, 22811, 21906, 23565, 23996, 22407
Telefunken	23076, 20551	Yukai	20741, 20869	Magnat	21923
Teletech	20768, 20713	Zeniith		Marquant	20770
Tensai	20770			Medion	22189
Tesco	23429, 23633, 21316	DVD Changer		MEI	20790
Tevion	22425, 21382, 21036, 20651, 20898, 21630, 23154	Denon	20634, 21634	Mx Onda	20651
		JVC	20623	Nexius	20790
Textorm	21493	LG	20741	Nikkai	21923
Thomson	20551, 20522, 23068, 20831	Onkyo	20627	Onkyo	20627
		Panasonic	20490, 21579, 21641	Orava	21923
Tokai	20788, 20898, 21233	Philips	22056	Oritron	20651
Tom-Tec	21601	Pioneer	21965	Palladium	21906
Top Suxess	21224	Sony	21633, 21033, 21533, 21548, 21070, 21824, 21981	Panasonic	21834, 23901, 23230, 22978, 21908, 23935, 23642
Toshiba	20503, 22006, 21769, 22705	Toshiba	20503	Philips	22526, 23353, 21846, 21813, 22371, 23147, 22301, 22334, 22926, 22789, 23004, 21849, 21267, 20539
Tosumi	21005	Yamaha	20497		21965, 21997, 21900, 20571
TRANS- continents	20872, 20831, 21233			PJ	21923
Trent	21643	DVD Home Cinema		Pro Vision	21923
Trevi	20831, 22736	AEG	21923, 20790	QONIX	20790
TSM	21224, 21549	AFK	21923	Quadro	21923
TVE	20713	Aiwa	22020	Red Star	21923
United	20788, 21115, 21152, 21351, 20713, 20730, 21233, 20695, 21643	Akai	20790	Samsung	22951, 20298, 22886, 21932, 22873, 22765, 23428, 23467
		Amstrad	20790	Sanyo	20670
Universum	20713, 20741, 20591	ASCOMTEC	21923	Schneider	20790
Vecatech	21493	Audiosonic	21923	Scott	21923
Venturer	20790, 21769	Belson	21923	Shenzhen KXD	21923
Vestel	20713	Binatone	21923	Multi-Media	
Vitek	20831	Blue Sky	20790	Sony	21824, 22020, 22132, 23539, 22504, 23964, 21981, 21903, 21934, 21033, 21070
Voxson	20831	Bose	22023		21906
Waitec	20730, 21224, 21233	Cat	21923	Targa	21906
		Clatronic	21923	Tevion	21923
Welkin	20831	Curtis	21923	Thomson	20522
Wellington	20713	Dantax	20790	Tokai	20790
Weltstar	20713	Denon	21844, 21634, 20634		
Wharfedale	20713	Denver	21923		
Wilson	21233, 20831	Dicra	22235		
Windsor	20713	Dual	20790		
Windy Sam	20573	Epworth	22020		
Woolworths	22235	Finlux	20672		
WorthIt!	22235	Goodmans	20790, 21923		
Woxter	21224, 21005	Grunkel	20790		
		Hanseatic	20790		
		Harman/Kardon	23744, 20702		
		HE	21923		
		Hiteker	21923		

Toshiba 22006
 Universum 20790
 Venturer 20790
 Xenius 20790
 Yamaha 21840
 Zenith 21906

**DVD Home Cinema/VCR
 Combination**
 Go Video 20869

**DVD/Digital Media Receiver
 Combination**
 Kiss 20396

**DVD/Digital Terrestrial
 Combination**
 Akira 23086
 Amstrad 22139
 Aspects 23086
 Audiola 22163
 Auvisio 23086
 Belson 22139
 Best Buy 24006, 22163,
 22139, 23086
 Denver 23619
 Dicra 23086
 F&U 22172
 Funai & United 22172
 Funai United 22172
 GoGen 23086
 Goodmans 22382
 Grundig 20551
 i-Joy 23086
 LG 20741, 24090,
 23308, 22407,
 22135
 Muvid 22173
 Overtch 23619
 Philips 22868, 23004
 Pioneer 22279
 Sencor 23086
 Sigmatek 22139
 Sogo 22172
 Sunstech 22139
 Supratech 22172, 22139
 TBoston 22139
 Thomson 20551
 Woxter 22139
 Yamada 22139

**DVD/Digital Terrestrial/PVR
 Combination**

Axil 23086
 Energy Sistem 23086

DVD/PVR Combination

Akira 23086
 Auvisio 23086
 Dyon 23086
 Ellion 20122
 JVC 20623
 LG 20741, 22407,
 22135, 24090
 Magnavox 20675
 Philips 22791, 21340,
 22093, 21158,
 22511, 22049,
 20539, 22868,
 22371
 Sansui 20122
 Sony 22861, 21536,
 22132, 22839,
 21033, 21070,
 21540
 Targa 21644, 20741,
 22076
 Thomson 20551
 Time 20122

DVD/SAT/PVR Combination

Dyon 23086

DVD/VCR Combination

Broksonic 20695
 Bush 21436
 Centrum 20675
 Clatronic 20675
 Durabrand 20675
 EuroLine 20675
 Firstline 20869
 Go Video 20869, 20741
 GoldStar 20741
 Hitachi 20664
 Irradio 20869
 JVC 21602
 Lumatron 20741
 Lunatron 20741
 Magnavox 20675
 Magnum 21436
 Micromaxx 20695
 Orion 20695
 Panasonic 21579, 20490,
 22678, 21661,
 23583, 21638,
 21641
 Philco 20675
 Philips 21267, 22695,
 20675, 20539,
 20646, 21506
 Radionette 20869
 RCA 20522
 Samsung 22113, 22269,

21075, 20744
 Sanyo 20695
 Schneider 20869
 Sharp 20630, 20675,
 20869
 Silva Schneider 20869
 Sony 20864, 21070,
 21033
 Sylvania 20675
 Symphonic 20675
 Thomson 20551
 United 20675
 Universum 20869

DVD/VCR Home Cinema

LG 20741, 20869
 Philips 21267
 Targa 20741

DVD/VCR/PVR Combination

Pioneer 20631, 21768,
 22279, 21571

DVD-R

4Kus 21158
 Alba 21530
 Aristona 20646
 CyberHome 21023
 Daewoo 21436
 Dayton Audio 21158
 Denon 20490
 Digitek 20122
 Dual 21436, 21530
 Durabrand 21530
 Fintec 21530
 Firstline 21530
 Gateway 21158
 Go Video 20741, 21158
 Goodmans 21530, 22382
 GPX 20741
 Hitachi 21748
 Höher 21530
 Humax 20646
 JGC 21530
 Kansas 21530
 Technologies
 LG 20741, 22407,
 22135, 22189
 Loewe 20741
 Magnavox 20675, 21506,
 20646
 Medion 22076, 20741,
 21644
 21158
 Oopla 21158
 Philips 22791, 20646,
 21340, 22868,
 21506, 22093,

	21158, 22049, 22511, 20539, 22371	DVD-R/PVR Combination	Dual	21436
		Acoustic Solutions	Grundig	21436, 21416
Pioneer	20631, 21768, 22279	Amitech	LG	20741, 20869, 22135
ProLine	21738, 22382	AS	Magnum	21436
RCA	20522	Digitek	Pye	20675, 20646
Sansui	20122	Ellion	Tech Line	21436
Sanyo	20670	Funai		
Schneider	20646	GPX	DVD-R/VCR/PVR Combination	
Sharp	20675, 20630, 20713	Grundig	Funai	20675, 20695
		H & B	Toshiba	22682, 20503, 21510
Sylvania	20675	Hyundai		
Techwood	21530, 22382	JGC		
Telefunken	23076	LiteOn	Game Console	
Thomson	20551		Microsoft	21708, 22083, 22202
Vestel	21530	Logik	Sony	20772, 20533
Waltham	21530	Medion	Xbox	22083, 21708, 22202, 20522
Yamada	21416, 21158			
Yamaha	20646, 21840	Neon		
		Nordmende	HD DVD	
DVD-R Home Cinema		ProLine	LG	20741
Philips	21846	Prosonic	Microsoft	22202, 21708, 22083
		SEG		
DVD-R/Digital Terrestrial Combination		Sencor	Onkyo	21769
GoGen	23076, 23086	Silva Schneider	RCA	21769
Samsung	22942, 23195, 21635, 22107, 21748, 22833, 22113, 22886, 20490	Sky Media	Toshiba	21769
		Sony	Xbox	22202, 21708, 22083
Sony	22861, 21033, 21070			
Wharfedale	22382	Soundwave	Hi-Fi System	
		Targa	Panasonic	20490, 21908, 24190
DVD-R/Digital Terrestrial/PVR Combination		Tchibo	LCD TV	
Best Buy	24006	Technika	Samsung	20573, 20744, 21635, 21932, 22886, 22951
Panasonic	21579, 23580, 22678, 22710, 20490, 23583, 21661, 22867, 21638, 22584, 23195, 21635, 22942, 22833, 22107, 21748, 20490, 22886	Techwood		
		Tevion	LCD/DVD Combination	
Samsung	22107, 21748, 20490, 22886	Time	LG	23308
		Toshiba		
Toshiba	22682, 21510, 21639	Unimade	MD	
Wharfedale	22382	Universum	Toshiba	22705
		Wharfedale		
		Yamada	Media Center Controller	
DVD-R/Digital Terrestrial/PVR Home Cinema			Kiss	20396
LG	22407, 20741	DVD-R/PVR Home Cinema		
		LG	Mobile DVD	
			Panasonic	20490
		DVD-R/SAT/PVR Combination		
		Panasonic	Portable Blu-ray	
			Panasonic	21641
		DVD-R/VCR Combination		
		AEG	Portable DVD	
		Agfaphoto	LG	20869, 20741, 23308
		Bush		
		Daewoo		

Panasonic	20490, 21641
Philips	20539
Pioneer	21571
SEG	20872
Sharp	20630
Sunstech	20831
Sytech	20831
Toshiba	20503

TV/VCR/DVD Combination	
Ferguson	20695, 20713
Matsui	20695, 20713

Portable LCD/DVD/Digital Terrestrial Combination

LG	23308
----	-------

PVR

LG	23565
----	-------

TV/DVD Combination

Alba	20695
Black Diamond	20713
Blue Sky	20713
Bush	20713
Centrum	20713
Crown	20713
Dual	20713, 21115
Elfunk	20713
Goodmans	20713
Grandin	20713
Grundig	20539, 20695
Hitachi	20713
Logik	20713
Luxor	20713
Orava	20713
Philips	20539
Sanyo	20695
SEG	20713
Sliding	21115
Sony	20864
Technica	20713
Teletech	20713
Thomson	20551
Toshiba	20695
United	20713
Universum	20713
Weltstar	20713
Wharfedale	21115
Xiron	20713

TV/DVD/Digital Terrestrial Combination

Orion	20713, 20695
Waltham	20713

TV/PVR Combination

Samsung	20573, 20744, 21932, 22886
---------	-------------------------------

Declaration of Conformity



Declaration of Conformity (Europe Only)

This product is in conformity with the Council Directives:

- EMC Directive 2004/108/EC
- Low voltage Directive 2006/95/EC

Notes



©2014 Entone, Inc. Entone, Nova and connecting the home are trademarks of Entone, Inc. Other company, product, and service names may be trademarks or service marks of others. All information contained in this document is subject to change without notice. Information contained in this document is provided on an as is basis. In no event will Entone be liable for damages arising directly or indirectly from any use of the information contained in this document. Subject to change without notice.